

# **AD-758DV / ML-758DV**

## **Installation Manual**

### **Phase 7 / DSI / Dual Timer**

**WARNING:** For your safety the information in this manual must be followed to minimize the risk of fire or explosion and to prevent property damage, personal injury or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **WHAT TO DO IF YOU SMELL GAS:**
  - Do not try to light any appliance.
  - Do not touch any electrical switch; do not use any phone in your building.
  - Clear the room, building or area of all occupants.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
  - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

**AVERTISSEMENT:** Assurez-vous de bien suivre les instructions données dans cette notice pour réduire au minimum le risque d'incendie ou d'explosion ou pour éviter tout dommage matériel, toute blessure ou la mort.

- Ne pas entreposer ni utiliser d'essence ni d'autres vapeurs ou liquides inflammables à proximité de cet appareil ou de tout autre appareil.
- **QUE FAIRE SI VOUS SENTEZ UNE ODEUR DE GAZ:**
  - Ne pas tenter d'allumer d'appareils.
  - Ne touchez à aucun interrupteur. Ne pas vous servir des téléphones se trouvant dans le bâtiment.
  - Évacuez la pièce, le bâtiment ou la zone.
  - Appelez immédiatement votre fournisseur de gaz depuis un voisin. Suivez les instructions du fournisseur.
  - Si vous ne pouvez rejoindre le fournisseur de gaz, appelez le service des incendies.
- L'installation et l'entretien doivent être assurés par un installateur ou un service d'entretien qualifié ou par le fournisseur de gaz.



**American Dryer Corporation**  
88 Currant Road  
Fall River MA 02720-4781 USA  
Telephone: +1 (508) 678-9000 / Fax: +1 (508) 678-9447  
e-mail: techsupport@amdry.com

[www.adclaundry.com](http://www.adclaundry.com)

ADC Part No. 113230-21

## Retain This Manual in a Safe Place for Future Reference

This product embodies advanced concepts in engineering, design, and safety. If this product is properly maintained, it will provide many years of safe, efficient, and trouble free operation.

**Only qualified technicians should service this equipment.**

**OBSERVE ALL SAFETY PRECAUTIONS** displayed on the equipment or specified in the installation manual included with the dryer.

The following **“FOR YOUR SAFETY”** caution must be posted near the dryer in a prominent location.

### FOR YOUR SAFETY

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

### POUR VOTRE SÉCURITÉ

Ne pas entreposer ni utiliser d'essence ni d'autres vapeurs ou liquides inflammables à proximité de cet appareil ou de tout autre appareil.

We have tried to make this manual as complete as possible and hope you will find it useful. The manufacturer reserves the right to make changes from time to time, without notice or obligation, in prices, specifications, colors, and material, and to change or discontinue models. The illustrations included in this manual may not depict your particular dryer exactly.

## IMPORTANT

For your convenience, log the following information:

DATE OF PURCHASE \_\_\_\_\_ MODEL NO. \_\_\_\_\_

RESELLER'S NAME \_\_\_\_\_

SERIAL NUMBER(S) \_\_\_\_\_

Replacement parts can be obtained from your reseller or the ADC factory. When ordering replacement parts from the factory, you can FAX your order to ADC at +1 (508) 678-9447 or telephone your order directly to the ADC Parts Department at +1 (508) 678-9000. Please specify the dryer model number and serial number in addition to the description and part number, so that your order is processed accurately and promptly.

These instructions are only valid if the following country code is on the appliance... If this code is not present on the appliance, it is necessary to refer to the technical instructions which will provide the necessary information concerning the modification of the appliance to the condition of use for the country.

In accordance with EN ISO 3166-1, the names of countries shall be represented by the following codes:

**GB** United Kingdom  
**IE** Ireland

### “IMPORTANT NOTE TO PURCHASER”

Information must be obtained from your local gas supplier on the instructions to be followed if the user smells gas. These instructions must be posted in a prominent location near the dryer.

## **⚠ WARNING**

### **Proposition 65**

Use of this product could expose you to substances from fuel combustion that contain chemicals known to the State of California to cause cancer, birth defects and other reproductive harm.

## **IMPORTANT**

You must disconnect and lockout the electric supply and the gas supply or the steam supply before any covers or guards are removed from the machine to allow access for cleaning, adjusting, installation, or testing of any equipment per OSHA standards.

Please observe all safety precautions displayed on the equipment and/or specified in the installation manual included with the dryer.

## **CAUTION**

Dryers should never be left unattended while in operation.

“Caution: Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper operation.”

«Attention: Au moment de l'entretien des commandes, étiquetez tous les fils avant de les débrancher. Des erreurs de câblage peuvent entraîner un fonctionnement inadéquat et dangereux.»

## **WARNING**

Children should not be allowed to play on or near the dryer(s). Children should be supervised if near dryers in operation.

Under no circumstances should the dryer door switches, lint drawer switch, or heat safety circuit ever be disabled.

Do not modify this appliance.

The dryer must never be operated with any of the back guards, outer tops, or service panels removed. Personal injury or fire could result.

The dryer must never be operated without the lint filter/screen in place, even if an external lint collection system is used.

If the hi-limit switch trips, a service call is required to investigate the reason and resolve the issue.

## **FOR YOUR SAFETY**

Do not dry mop heads in the dryer. Do not use dryer in the presence of dry cleaning fumes.

The dryers must not be installed or stored in an area where it will be exposed to water or weather.

The wiring diagram for the dryer is located in the front electrical control box area.

In the State of Massachusetts, the following installation instructions apply:

- Installations and repairs must be performed by a qualified or licensed contractor, plumber, or gasfitter qualified or licensed by the State of Massachusetts.
- If using a ball valve, it shall be a T-handle type.
- A flexible gas connector, when used, must not exceed 3 feet.

## **Table of Contents**

<b>Safety Precautions</b> .....	<b>4</b>
<b>Specifications</b> .....	<b>6</b>
<b>Component Identification</b> .....	<b>8</b>
<b>Installation Procedures</b> .....	<b>8</b>
Location Requirements .....	8
Unpacking / Setting Up .....	9
Dryer Enclosure Requirements .....	9
Fresh Air Supply Requirements .....	10
Exhaust Requirements .....	10
Electrical Information .....	13
Gas Information .....	17
Steam Information .....	19
Preparation for Operation / Start-Up .....	21
Preoperational Test .....	21
Preoperational Instructions .....	22
Shutdown Instructions .....	23
<b>Service / Parts Information</b> .....	<b>23</b>
Service .....	23
Parts .....	23
<b>Warranty Information</b> .....	<b>23</b>
Returning Warranty Cards .....	23
Warranty .....	24
Returning Warranty Parts .....	24
<b>Routine Maintenance</b> .....	<b>24</b>
Cleaning .....	24
Adjustments .....	25
Lubrication .....	25
Lint Drawer Removal .....	25
<b>Data Label Information</b> .....	<b>25</b>
<b>Procedure for Functional Check of Replacement Components</b> .....	<b>26</b>
<b>Manual Reset Burner Hi-Limit Instructions</b> ...	<b>27</b>
<b>Fire Suppression System</b> .....	<b>28</b>
<b>Non-Coin Programming</b> .....	<b>32</b>
<b>Coin Programming</b> .....	<b>33</b>

## **List of Acronyms**

DSI	Direct Spark Ignition
HVAC	Heating, Ventilating, and Air-Conditioning
in WC	Inches of Water Column
L.C.D.	Liquid Crystal Display
L.E.D.	Light Emitting Diode
L.P.	Liquid Propane
OSHA	Occupational Safety and Health Administration
R.M.A.	Return Material Authorization
UL	Underwriters Laboratory

## Safety Precautions

### **⚠ WARNING**

For your safety, the information in this manual must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury, or loss of life.

The dryer must never be operated with any of the back guards, outer tops, or service panels removed. Personal injury or fire could result.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

Do not spray aerosols in the vicinity of this appliance while it is in operation.

Purchaser and user should consult the local gas supplier for proper instructions to be followed in the event the user smells gas. The instructions should be posted in a prominent location.

### **What To Do If You Smell Gas:**

- Do not try to light any appliance.
- Do not touch any electrical switch.
- Do not use any phone in your building.
- Clear the room, building, or area of all occupants.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by a qualified installer, service agency, or gas supplier.

Dryers must be exhausted to the outdoors.

Although the manufacturer produces a very versatile dryer, there are some articles that, due to fabric composition or cleaning method, should not be dried in it.

### **⚠ WARNING**

Dry only water washed fabrics. Do not dry articles spotted or washed in dry cleaning solvents, combustible detergents, industrial chemicals, or "all purpose" cleaner. Explosion could result.

Do not dry rags or articles coated or contaminated with gasoline, kerosene, oil, paint, or wax. Explosion could result.

Do not dry mop heads. Contamination by wax or flammable solvents will create a fire hazard.

Do not use heat for drying articles that contain plastic, foam, sponge rubber, or similarly textured rubber materials. Drying in a heated tumbler may damage plastics or rubber and also may be a fire hazard.

The possible presence of residual quantities of aggressive or decomposed chemicals in the load may produce damage to the machine and harmful fumes.

A program should be established for the inspection and cleaning of lint in the burner area, exhaust ductwork, and area around the back of the dryer. The frequency of inspection and cleaning can best be determined from experience at each location.

### **⚠ WARNING**

The collection of lint in the burner area and exhaust ductwork can create a potential fire hazard.

For personal safety, the dryer must be electrically grounded in accordance with local and/or country codes. In the absence of these codes use the National Electrical Code ANSI/NFPA NO. 70-LATEST EDITION or in Canada, the Canadian Electrical Codes Parts 1 & 2 CSA C22.1-1990 or LATEST EDITION.

**NOTE:** Failure to electrically ground the dryer properly will void the warranty.

Under no circumstances should the dryer door switches, lint drawer switch, or heat safety circuit ever be disabled.

### **⚠ WARNING**

Personal injury or fire could result should the dryer door switches, lint drawer switch, or heat safety circuit ever be disabled.

This dryer is not to be used in the presence of dry cleaning solvents or fumes.

Remove articles from the dryer as soon as the drying cycle has been completed.

### **⚠ WARNING**

Articles left in the dryer after the drying and cooling cycles have been completed can create a fire hazard.

Read and follow all caution and direction labels attached to the dryer.

For safety, proper operation, and optimum performance, the dryer must not be operated with a load less than 66%, 50 lb (22.7 kg) of its rated capacity.

### **⚠ WARNING**

You must discontinue and lockout the electric supply and the gas supply or the steam supply before any covers or guards are removed from the machine to allow access for cleaning, adjusting, installation, or testing of any equipment per OSHA standards.

**IMPORTANT:** The dryer must be installed in a location/ environment, which the ambient temperature remains between 40° F (4.44° C) and 130° F (54.44° C).

**CE ONLY**

**IMPORTANT:** *This appliance must only be installed and operated in the country of destination indicated on the dryer's data plate. If the appliance is to be installed and operated in a country other than the one indicated on the data plate, a data plate amendment must be obtained from American Dryer Corporation.*

IEC335 applies.

NOTES \_\_\_\_\_

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

NOTES \_\_\_\_\_

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## Specifications

MAXIMUM CAPACITY (DRY WEIGHT)		75 lb	<b>34.02 kg</b>	
TUMBLER DIAMETER		36-1/4"	<b>92.08 cm</b>	
TUMBLER DEPTH		36"	<b>91.44 cm</b>	
TUMBLER VOLUME		21.50 cu ft	<b>608.81 L</b>	
TUMBLER (DRIVE) MOTOR Non-Reversing / Reversing		1 hp / 1/2 hp*	<b>0.75 kW / 0.37 kW</b>	
BLOWER (FAN) MOTOR Non-Reversing / Reversing		— / 1 hp*	<b>— / 0.75 kW</b>	
DOOR OPENING (DIAMETER)		31-3/8"	<b>79.69 cm</b>	
DOOR SILL HEIGHT		28"	<b>71.12 cm</b>	
WATER CONNECTION		3/4"-11.5 NH (North America) 3/4" B.S.P.T. (Outside North America)		
DRYERS PER 20'/40' CONTAINER		9 / 20		
DRYERS PER 48'/53' TRUCK		24 / 26		
GAS	VOLTAGE AVAILABLE		120-575V 1,3ø 2,3,4w 50/60 Hz	
	APPROXIMATE NET WEIGHT		721 lb <b>327.04 kg</b>	
	APPROXIMATE SHIPPING WEIGHT		773 lb <b>350.63 kg</b>	
	AIRFLOW	60 Hz	1,000 cfm	<b>28.32 cmm</b>
		50 Hz	833 cfm	<b>23.60 cmm</b>
	HEAT INPUT		175,000 Btu/hr	<b>44,099 kcal/hr</b>
	EXHAUST CONNECTION (DIAMETER)		8"	<b>20.32 cm</b>
	COMPRESSED AIR CONNECTION		N / A	
	COMPRESSED AIR VOLUME		N / A	
INLET PIPE CONNECTION		3/4" F.N.P.T. 3/4" B.S.P.T. (CE and Australia Only)		
ELECTRIC	VOLTAGE AVAILABLE		208-575V 3ø 3,4w 50/60 Hz	
	APPROXIMATE NET WEIGHT		721 lb <b>327.04 kg</b>	
	APPROXIMATE SHIPPING WEIGHT		773 lb <b>350.63 kg</b>	
	AIRFLOW	60 Hz	1,000 cfm	<b>28.32 cmm</b>
		50 Hz	833 cfm	<b>23.60 cmm</b>
	EXHAUST CONNECTION (DIAMETER)		8"	<b>20.32 cm</b>
	COMPRESSED AIR CONNECTION		N / A	
	COMPRESSED AIR VOLUME		N / A	
	OVEN SIZE			
	kW	Btu/hr	<b>kcal/hr</b>	
30	102,400	<b>25,800</b>		
STEAM**	VOLTAGE AVAILABLE		120-575V 1,3ø 2,3,4w 50/60 Hz	
	APPROXIMATE NET WEIGHT		816 lb <b>370.13 kg</b>	
	APPROXIMATE SHIPPING WEIGHT		868 lb <b>393.72 kg</b>	
	AIRFLOW	60 Hz	1,200 cfm	<b>33.98 cmm</b>
		50 Hz	1,000 cfm	<b>28.32 cmm</b>
	STEAM CONSUMPTION		275 lb/hr	<b>124.7 kg/hr</b>
	OPERATING STEAM PRESSURE		125 psi max	<b>8.62 bar</b>
	EXHAUST CONNECTION (DIAMETER)		8"	<b>20.32 cm</b>
	COMPRESSED AIR CONNECTION		1/8" F.N.P.T.	
	COMPRESSED AIR VOLUME		0.75 cfh	<b>0.02 cmh</b>
	BOILER HORSEPOWER (NORMAL LOAD)		7.2 Bhp	
	SUPPLY CONNECTION		(1) 1" N.P.T. (Female)	
RETURN CONNECTION		(1) 1" N.P.T. (Female)		

Shaded areas are stated in metric equivalents

1/5/15

\* Reversing dryers use 3-phase (3ø) motors.

\*\* Air-operated steam damper system requires a clean, dry, and regulated 80 psi +/- 10 psi (5.51 bar +/- 0.69 bar) air supply.

**NOTE:** The manufacturer reserves the right to make changes in specifications at any time without notice or obligation.


# Specifications

## DRYER NOTES:

- ° DUCTWORK SIZE VARIES WITH INSTALLATION CONDITIONS.
- ° EXHAUST STATIC PRESSURE MUST BE NO LESS THAN 0 AND MUST NOT EXCEED 0.7" (1.74 MB) WATER COLUMN.

## STEAM DRYER NOTES:


- ° OPERATING HEIGHT OF STEAM DRYER IS 79" (200.6 CM).
- ° SIZE OF PIPING TO DRYER VARIES WITH INSTALLATION CONDITIONS. CONTACT FACTORY FOR ASSISTANCE.
- ° AIR OPERATED STEAM DAMPER SYSTEM REQUIRES CLEAN, DRY, REGULATED 80 PSI ± 10 PSI (5.5 BAR ± 0.69 BAR) AIR SUPPLY.

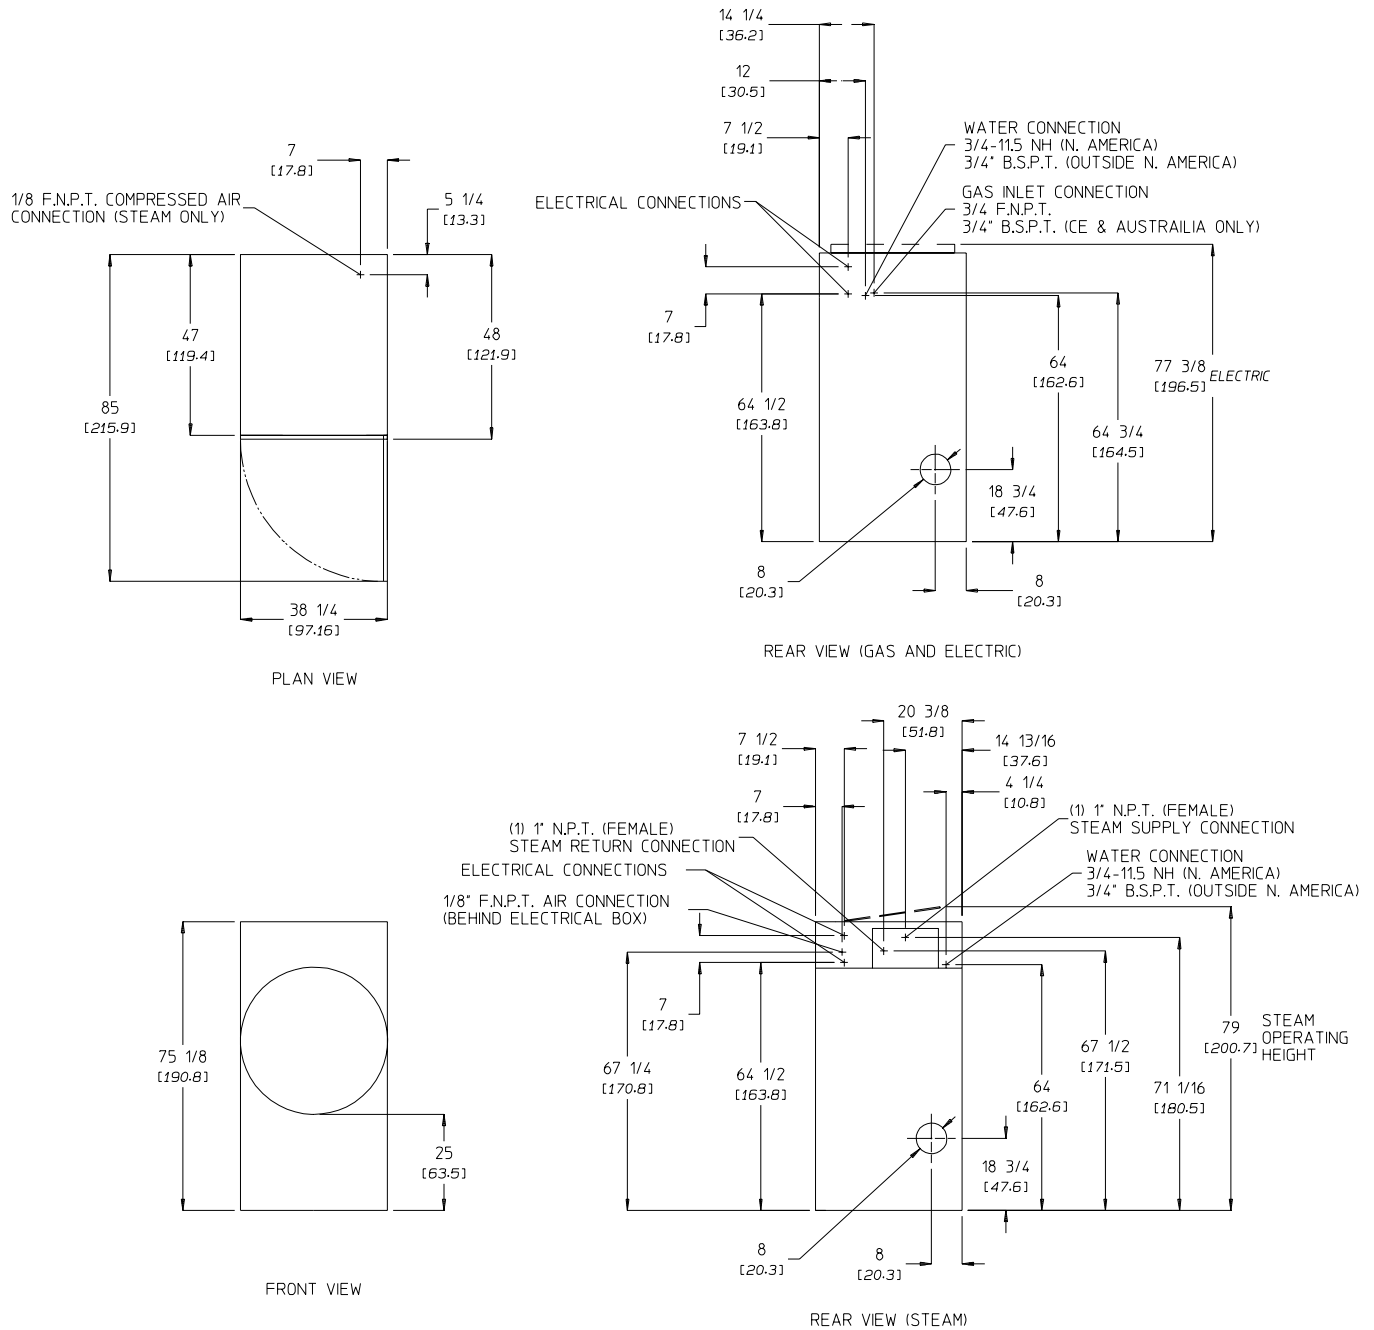

**NOTE:** The manufacturer reserves the right to make changes in specifications at any time without notice or obligation.

## Component Identification


### Dryer Front View

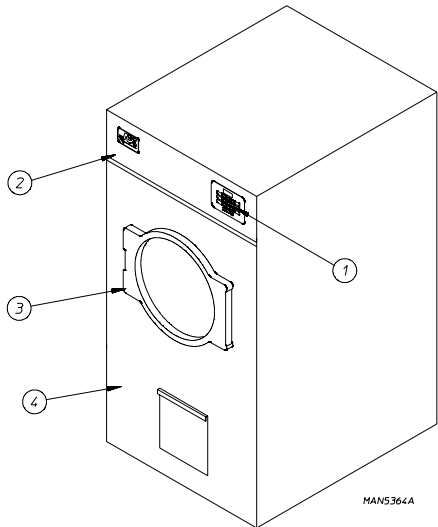

Illus. No.	Description
------------	-------------

- |   |  |
|---|--|
| 1 | Controls   |
| 2 | Control (top access) Door Assembly   |
| 3 | Main Door Assembly   |
| 4 | Lint Compartment Area<br>(lint screen located behind lint door or left sidewall) |

### Dryer Rear View

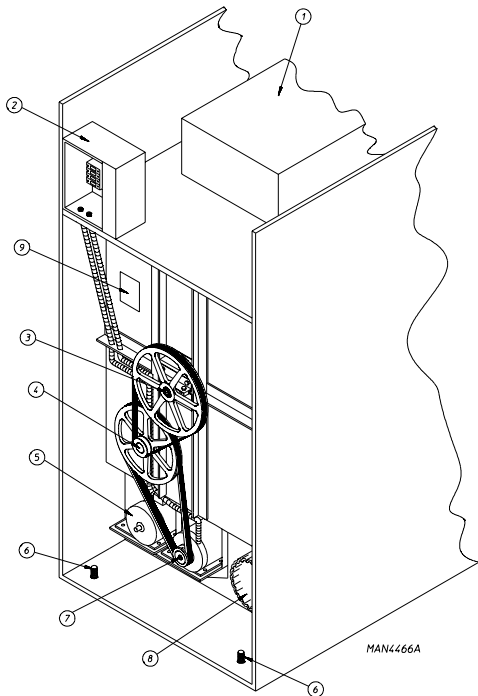

Illus. No.	Description
------------	-------------

- |   |   |
|---|---|
| 1 | Heating Unit                                      |
| 2 | Electric Service Relay Box                        |
| 3 | Tumbler Bearing Mount Assembly                    |
| 4 | Idler Bearing Mount Assembly                      |
| 5 | Blower Motor Assembly (for reversing models only) |
| 6 | Leveling Legs (rear)                              |
| 7 | Tumbler (drive) Motor Assembly                    |
| 8 | Dryer Exhaust                                     |
| 9 | Data Label and Installation Label                 |

## Installation Procedures

Installation should be performed by competent technicians in accordance with local and state codes. In the absence of these codes, the installation must conform to applicable American National Standards: ANSI Z223.1-LATEST EDITION (National Fuel Gas Code) or ANSI/NFPA NO. 70-LATEST EDITION (National Electrical Code) or in Canada, the installation must conform to applicable Canadian Standards: CAN/CGA-B149.1-M91 (Natural Gas) or CAN/CGA-B149.2-M91 (L.P. Gas) or LATEST EDITION (for General Installation and Gas Plumbing) or Canadian Electrical Codes Parts 1 & 2 CSA C22.1-1990 or LATEST EDITION (for Electrical Connections).

### Location Requirements

Before installing the dryer, be sure the location conforms to local codes and ordinances. In the absence of such codes or ordinances the location must conform with the National Fuel Gas Code ANSI.Z223.1 LATEST EDITION, or in Canada, the installation must conform to applicable Canadian Standards: CAN/CGA-B149.1-M91 (Natural Gas) or CAN/CGA-B149.2-M91 (L.P. Gas) or LATEST EDITION (for General Installation and Gas Plumbing).

The dryer must be installed on a sound level floor capable of supporting its weight. Carpeting must be removed from the floor area that the dryer is to rest on.

**IMPORTANT:** "The dryer must be installed on noncombustible floors only."

The dryer must not be installed or stored in an area where it will be exposed to water and/or weather.

The dryer is for use in noncombustible locations.

Provisions for adequate air supply must be provided as noted in this manual (refer to Fresh Air Supply Requirements section).

Clearance provisions must be made from combustible construction as noted in this manual (refer to Dryer Enclosure Requirements section).

Provisions must be made for adequate clearances for servicing and for operation as noted in this manual (refer to Dryer Enclosure Requirements section).

The dryer must be installed with a proper exhaust duct connection to the outside as noted in this manual (refer to Exhaust Requirements section).

The dryer must be located in an area where correct exhaust venting can be achieved as noted in this manual (refer to Exhaust Requirements section).

**IMPORTANT:** The dryer should be located where a minimum amount of exhaust ducting will be necessary.

The dryer must be installed with adequate clearance for air openings into the combustion chamber.

**CAUTION:** This dryer produces combustible lint and must be exhausted to the outdoors. Every 6 months, inspect the exhaust ducting and remove any lint buildup.

**IMPORTANT:** The dryer must be installed in a location/environment, which the ambient temperature remains between 40° F (4.44° C) and 130° F (54.44° C).



## Unpacking / Setting Up

Remove protective shipping material (i.e., plastic wrap and optional shipping box) from the dryer.

**IMPORTANT:** Dryer must be transported and handled in an upright position at all times.


The dryer can be moved to its final location while still attached to the skid or with the skid removed. To unskid the dryer, locate and remove the four bolts securing the base of the dryer to the wooden skid. Two are at the rear base (remove the back panel for access), and two are located in the bottom of the lint chamber. To remove the two bolts located in the lint chamber area, remove the lint door.

To increase bearing life and improve efficiency, the dryer should be tilted slightly to the rear.

The lint coops of this dryer are supported during shipping by a bracket. Remove this bracket before starting the dryer.

## Leveling Dryer

The dryer is equipped with four leveling legs, one at each corner of the base. Two are located at the rear of the dryer base, and two are located in the lint chamber (coop). To increase bearing life and improve efficiency, the dryer should be tilted slightly to the rear.

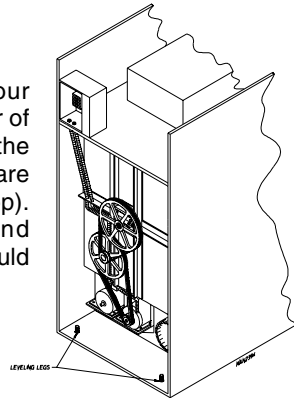

## Dryer Enclosure Requirements


Bulkheads and partitions should be made of noncombustible materials and must be located a minimum of 12-inches (30.48 cm) (18-inches [45.72 cm] or more is recommended for ease of installation, maintenance, and service) above the dryer's outer top, except along the front of the dryer, which may be partially closed in if desired. The clearance between the bulkhead header and the dryer must be a minimum of 4-inches (10.16 cm) and must not extend more than 4-inches (10.16 cm) to the rear of the front. The bulkhead facing must not be closed in all the way to the top of the dryer. A 1-inch (2.54 cm) clearance is required.

**NOTE:** Allowances must be made for opening the control door.

Dryers may be positioned sidewall to sidewall. However, a 1/16" (1.5875 mm) minimum allowance must be made for the opening and closing of the control door and the lint door. It is suggested that the dryer be positioned about 2 feet (0.61 meters) away from the nearest obstruction for ease of installation, maintenance, and service (to be measured from the back guard). Refer to the illustration below for details.

**NOTE:** Air considerations are important for proper and efficient operation.

**IMPORTANT:** Even though a minimum of only 12-inches (30.48 cm) is required, 18-inches (45.72 cm) or more is suggested. The additional clearance is advantageous for ease of installation and service.

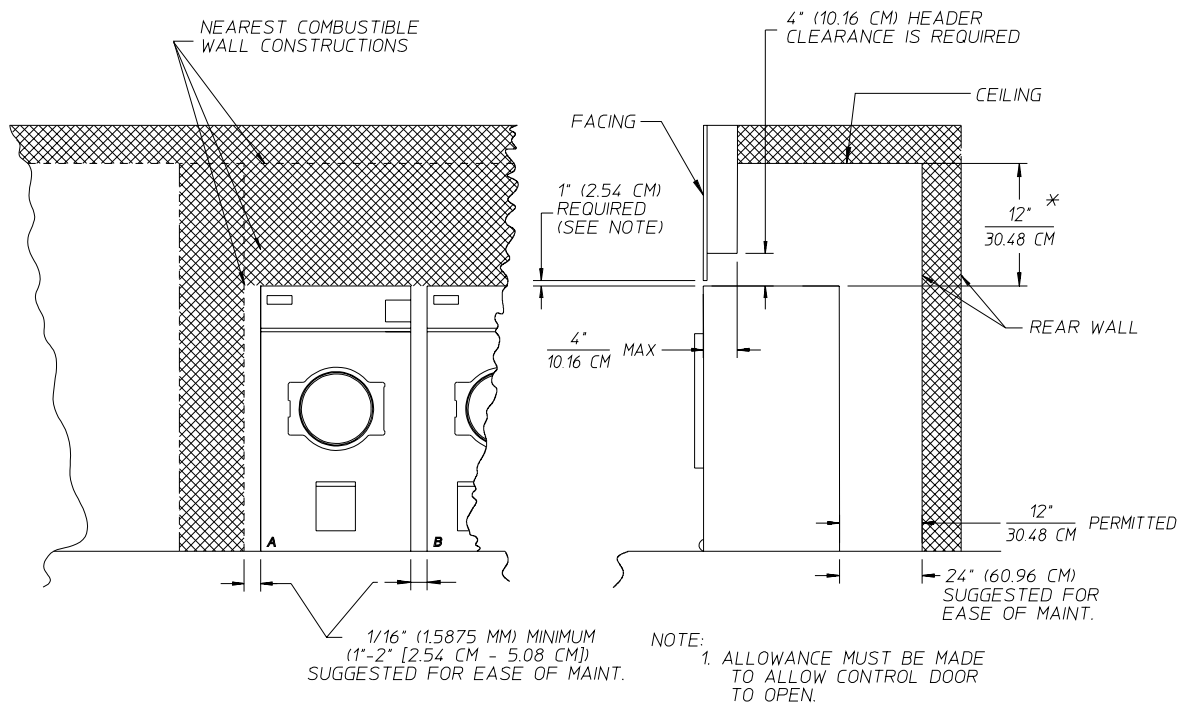

\*IN CASES WHERE SPRINKLER HEADS ARE OVER THE DRYERS 18" (45.72 CM) IS SUGGESTED.



**IMPORTANT:** When fire sprinkler systems are located above the dryers, a minimum of 18-inches (45.72 cm) above the dryer console (module) is required. Dryers may be positioned sidewall to sidewall however, a 1/16" (1.5875 mm) minimum allowance is required between dryers (or wall) for ease of installation and maintenance. Allowances must be made for the opening and closing of the control door and the lint door.

## Fresh Air Supply Requirements \_\_\_\_\_

This appliance may only be installed in a room that meets the appropriate ventilation requirements specified in the national installation regulations.

When the dryer is operating, it draws in room air, heats it, passes this air through the tumbler, and exhausts it out of the building. Therefore, the room air must be continually replenished from the outdoors. If the make-up air is inadequate, drying time and drying efficiency will be adversely affected. Ignition problems and sail switch "fluttering" problems may result, as well as premature motor failure from overheating.

Air supply (make-up air) must be given careful consideration to ensure proper performance of each dryer. An unrestricted source of air is necessary for each dryer. An airflow of 1,000 cfm (cubic feet per minute), (28.3 cmm [cubic meters per minute]) must be supplied to each dryer. As a general rule, an unrestricted air entrance from the outdoors (atmosphere) of a minimum of 1-1/2 square feet (0.14 square meters) is required for each dryer. The dryer must be installed with provisions for adequate combustion and make-up air supply.

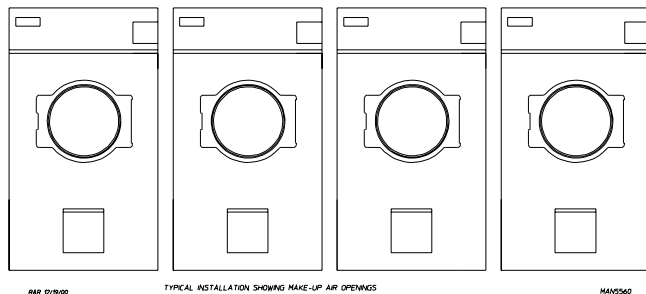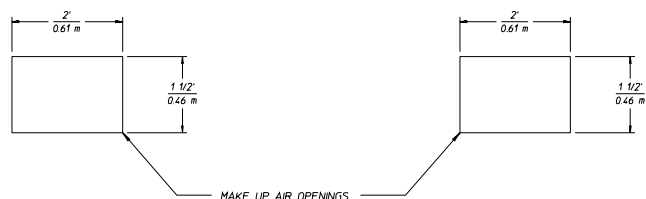

To compensate for the use of registers or louvers used over the openings, this make-up air must be increased by approximately thirty-three percent. Make-up air openings should not be located in an area directly near where exhaust vents exit the building.

It is not necessary to have a separate make-up air opening for each dryer. Common make-up air openings are acceptable. However, they must be set up in such a manner that the make-up air is distributed equally to all the dryers.

**EXAMPLE:** For a bank of four dryers, two unrestricted openings measuring 2 feet by 1-1/2 feet (0.61 meters by 0.46 meters), (6 square feet [0.56 square meters]) are acceptable.

Allowances must be made for remote or constricting passageways or where dryers are located at excessive altitudes or predominantly low pressure areas.

**IMPORTANT:** Make-up air must be provided from a source free of dry cleaning solvent fumes. Make-up air that is contaminated by dry cleaning solvent fumes will result in irreparable damage to the motors and other dryer components.

**NOTE:** Component failure due to dry cleaning solvent fumes will void the warranty.

## Exhaust Requirements \_\_\_\_\_

### General Exhaust Ductwork Information

Exhaust ductwork should be designed and installed by a qualified professional. Improperly sized ductwork will create excessive back pressure, which results in slow drying, increased use of energy, overheating of the dryer, and shutdown of the burner by the airflow (sail) switches, burner hi-limits, or basket hi-heat thermostats. The dryer must be installed with a proper exhaust duct connection to the outside.

The design of the flue system shall be such that any condensate formed when operating the appliance from cold shall either be retained and subsequently re-evaporated or discharged.

**CAUTION:** This dryer produces combustible lint and must be exhausted to the outdoors.

Improperly sized or installed exhaust ductwork can create a potential fire hazard.

**IMPORTANT:** Exhaust back pressure measured by a manometer/magnehelic in the exhaust duct must be no less than 0 and must not exceed 0.7 in WC (1.74 mb).

**NOTE:** It is recommended that exhaust or booster fans not be used in the exhaust ductwork system except where necessary to maintain exhaust back pressure (in the exhaust duct) between zero and 0.7 inch water column. Where employed, booster fans must not activate the dryer airflow proving switch (sail switch) when the dryer is not in operation.

The ductwork should be laid out in such a way that the ductwork travels as directly as possible to the outdoors with as few turns as possible. Single or independent dryer venting is recommended.

## Horizontal Venting

When single dryer venting is used, the length of ductwork from the dryer to the outside exhaust outlet must not exceed 25 feet (7.62 meters). The minimum diameter of this ductwork must be at least 8-inches (20.32 cm). In the case of multiple (common) dryer venting, the distance from the last dryer to the outside exhaust outlet must not exceed 15 feet (4.57 meters). The shape of the ductwork is not critical as long as the minimum cross-sectional area is provided. It is suggested that the use of 90° turns be avoided; use 30° and/or 45° angles instead. The radius of the elbows should preferably be 1-1/2 times the diameter of the duct. Including tumbler/dryer elbow connections or elbows used for outside protection from the weather, no more than two elbows should be used in the exhaust duct run. If more than two elbows are used, the cross-sectional area of the ductwork must be increased. All ductwork should be smooth inside with no projections from sheet metal screws or other obstructions, which will collect lint. When adding ducts, the duct to be added should overlap the duct to which it is to be connected. All ductwork joints must be taped to prevent moisture and lint from escaping into the building. Inspection doors should be installed at strategic points in the exhaust ductwork for periodic inspection and cleaning of lint from the ductwork.

## Vertical Venting

When single dryer venting is used, the length of the ductwork from the dryer to the outside exhaust outlet must not exceed 15 feet (4.57 meters). The minimum diameter of this ductwork must be at least 8-inches (20.32 cm). In the case of multiple (common) dryer venting, the distance from the last dryer to the outside exhaust outlet must not exceed 15 feet (4.57 meters). The shape of the ductwork is not so critical as long as the minimum cross-sectional area is provided. It is suggested that the use of 90° turns be avoided; use 30° and/or 45° bends instead. The radius of the elbows should preferably be 1-1/2 times the diameter of the duct. All ductwork should be smooth inside with no projections from sheet metal screws or other obstructions, which will collect lint. When adding ducts, the duct to be added should overlap the duct to which it is to be connected. All ductwork joints must be taped to prevent moisture and lint from escaping into the building. Inspection doors should be installed at strategic points in the exhaust ductwork for periodic inspection and cleaning of lint from the ductwork.

**IMPORTANT:** Exhaust back pressure measured by a manometer/magnehelic in the exhaust duct must be no less than 0 and must not exceed 0.7 in WC (1.74 mb).

**NOTE:** It is recommended that exhaust or booster fans not be used in the exhaust ductwork system except where necessary to maintain exhaust back pressure (in the exhaust duct) between zero and 0.7 inch water column. Where employed, booster fans must not activate the dryer airflow proving switch (sail switch) when the dryer is not in operation.

When the exhaust ductwork passes through a wall, ceiling, or roof made of combustible materials, the opening must be 2-inches (5.08 cm) larger than the duct (all the way around). The duct must be centered within this opening.


As per the National Fuel Gas Code, "Exhaust ducts for type 2 clothes dryers shall be constructed of sheet metal or other noncombustible material. Such ducts shall be equivalent in strength and corrosion resistance to ducts made of galvanized sheet steel not less than 26 gauge (0.0195-inches [0.50 mm]) thick."

## Outside Ductwork Protection


To protect the outside end of the horizontal ductwork from the weather, a 90° elbow bent downward should be installed where the exhaust exits the building. If the ductwork travels vertically up through the roof, it should be protected from the weather by using a 180° turn to point the opening downward. In either case, allow at least twice the diameter of the duct between the duct opening and the nearest obstruction.

**IMPORTANT:** Do not use screens, louvers, or caps on the outside opening of the exhaust ductwork.

### VERTICAL DUCTING

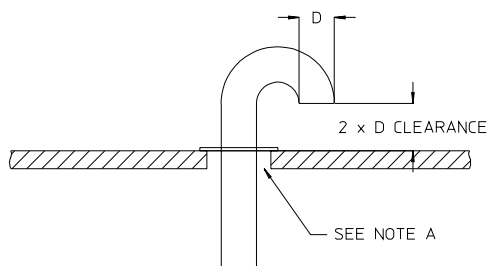

### HORIZONTAL DUCTING

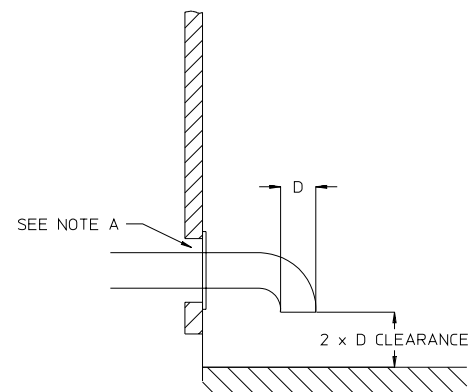

NOTE \*A\*: OPENING MUST BE TWO (2) INCHES (5.08 CM) LARGER THAN DUCT (ALL THE WAY AROUND). THE DUCT MUST BE CENTERED WITHIN THIS OPENING.

MAN4589

## Single Dryer Venting

When possible, it is suggested to provide a separate exhaust duct for each dryer. The exhaust duct should be laid out in such a way that the ductwork travels as directly as possible to the outdoors with as few turns as possible. It is suggested that the use of 90° turns in the ducting be avoided; use 30° and/or 45° angles instead. The shape of the exhaust ductwork is not critical as long as the minimum cross section area is provided.

**IMPORTANT:** Exhaust back pressure measured by a manometer/magnehelic in the exhaust duct must be no less than 0 and must not exceed 0.7 in WC (1.74 mb).

**NOTE:** It is recommended that exhaust or booster fans not be used in the exhaust ductwork system except where necessary to maintain exhaust back pressure (in the exhaust duct) between zero and 0.7 inch water column. Where employed, booster fans must not activate the dryer airflow proving switch (sail switch) when the dryer is not in operation.

**IMPORTANT:** For extended ductwork runs, the cross section area of the ductwork can only be increased to an extent. When the ductwork approaches the maximum limits noted in this manual, a professional HVAC firm should be consulted for proper venting information.

All ductwork should be smooth inside with no projections from sheet metal screws or other obstructions, which will collect lint. When adding ducts, the duct to be added should overlap the duct to which it is to be connected. All ductwork joints must be taped to prevent moisture and lint from escaping into the building. Inspection doors should be installed at strategic points in the exhaust ductwork for periodic inspection and cleaning of lint from the ductwork.

**NOTE:** When the exhaust ductwork passes through a wall, ceiling, or roof made of combustible materials, the opening must be 2-inches (5.08 cm) larger than the duct (all the way around). The duct must be centered within this opening.

## Outside Ductwork Protection

To protect the outside end of the horizontal ductwork from the weather, a 90° elbow bent downward should be installed where the exhaust exits the building. If the ductwork travels vertically up through the roof, it should be protected from the weather by using a 180° turn to point the opening downward. In either case, allow at least twice the diameter of the duct between the duct opening and the nearest obstruction.

**IMPORTANT:** Do not use screens, louvers, or caps on the outside opening of the exhaust ductwork.

NOTES \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_



\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

### SINGLE DRYER VENTING

### VERTICAL DUCTING

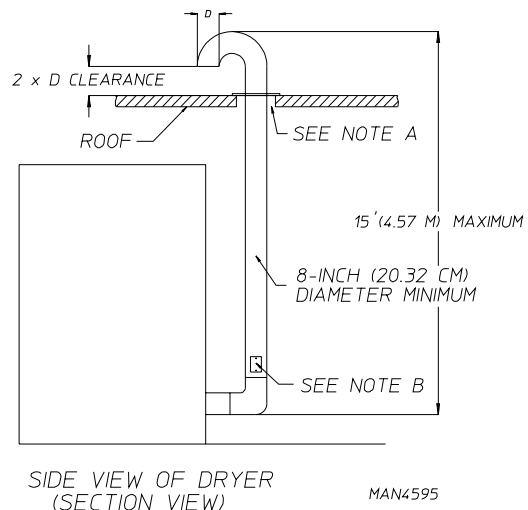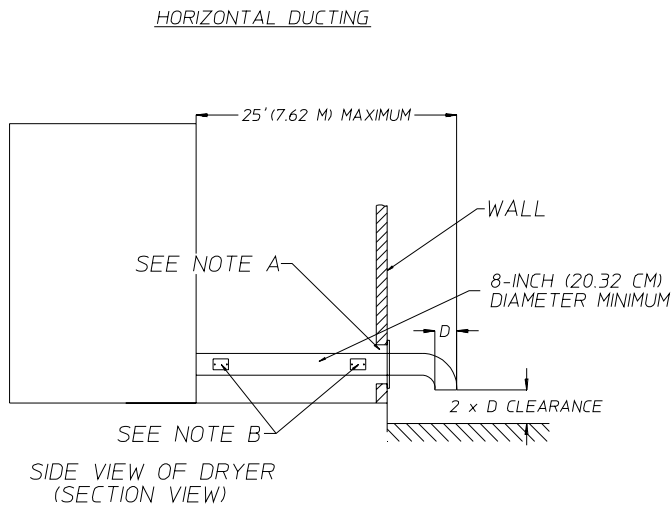

NOTE: "A"- OPENING MUST BE TWO (2) INCHES (5.08 CM) LARGER THAN DUCT (ALL THE WAY AROUND). THE DUCT MUST BE CENTERED WITHIN THIS OPENING.

"B"- INSPECTION DOORS SHOULD BE INSTALLED AT STRATEGIC POINTS FOR PERIODIC INSPECTION AND CLEANING

## Multiple (Common) Dryer Venting

**IMPORTANT:** For extended ductwork runs, the cross section area of the ductwork can only be increased to an extent. When the ductwork approaches the maximum limits noted in this manual, a professional HVAC firm should be consulted for proper venting information.

All ductwork should be smooth inside with no projections from sheet metal screws or other obstructions, which will collect lint. When adding ducts, the duct to be added should overlap the duct to which it is to be connected. All ductwork joints must be taped to prevent moisture and lint from escaping into the building. Inspection doors should be installed at strategic points in the exhaust ductwork for periodic inspection and cleaning of lint from the ductwork.

**NOTE:** When the exhaust ductwork passes through a wall, ceiling, or roof made of combustible materials, the opening must be 2-inches (5.08 cm) larger than the duct (all the way around). The duct must be centered within this opening.

## Outside Ductwork Protection

To protect the outside end of the horizontal ductwork from the weather, a 90° elbow bent downward should be installed where the exhaust exits the building. If the ductwork travels vertically up through the roof, it should be protected from the weather by using a 180° turn to point the opening downward. In either case, allow at least twice the diameter of the duct between the duct opening and the nearest obstruction.

**IMPORTANT:** Do not use screens, louvers, or caps on the outside opening of the exhaust ductwork.

## Electrical Information

### Electrical Requirements

All electrical connections must be made by a properly licensed and competent electrician. This is to ensure that the electrical installation is adequate and conforms to local and state regulations or codes. In the absence of such codes, All electrical connections, materials, and workmanship must conform to the applicable requirements of the National Electrical Code ANSI/NFPA NO. 70-LATEST EDITION or in Canada, the Canadian Electrical Codes Parts 1 & 2 CSA C22.1-1990 or LATEST EDITION.

**IMPORTANT:** Failure to comply with these codes or ordinances, and/or the requirements stipulated in this manual can result in personal injury or component failure.

**NOTE:** Component failure due to improper installation will void the warranty.


Each dryer should be connected to an independently protected branch circuit. The dryer must be connected with copper wire only. Do not use aluminum wire; it could create a fire hazard. The copper conductor wire/cable must be of proper ampacity and insulation in accordance with electric codes for making all service connections.

**NOTE:** The use of aluminum wire will void the warranty.

**IMPORTANT:** A separate protected circuit must be provided to each dryer.

**NOTE:** An individual ground circuit must be provided to each dryer, do not daisy chain.

MULTIPLE DRYER VENTING (758) WITH 8" (20.32 CM) DIAMETER (1,000 CFM [28.3 cmm]) EXHAUST CONNECTIONS AT COMMON DUCT

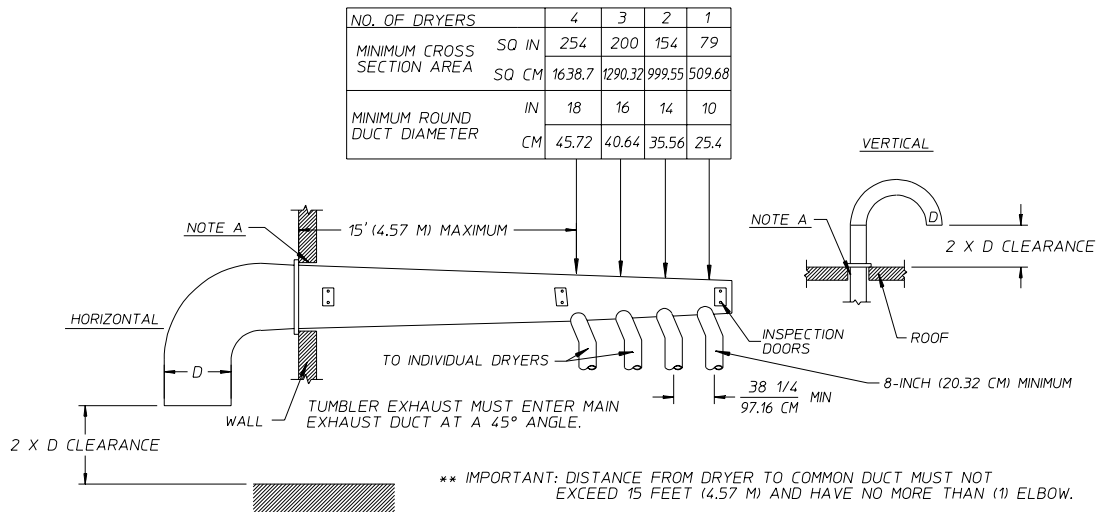


\*\* IMPORTANT: DISTANCE FROM DRYER TO COMMON DUCT MUST NOT EXCEED 15 FEET (4.57 M) AND HAVE NO MORE THAN (1) ELBOW.

IMPORTANT: NO MORE THAN 4 DRYERS CAN BE CONNECTED TO ONE COMMON DUCT (VENT).

### FORMULAS TO CALCULATE DUCTING CROSS SECTIONAL AREA

CROSS SECTIONAL AREA OF A ROUND DUCT = .785 (19.939 MM) x D<sup>2</sup> WHERE D = DIAMETER OF THE DUCT.

CROSS SECTIONAL AREA OF A RECTANGULAR DUCT = W x H WHERE W = WIDTH AND H = HEIGHT.



NOTE A: OPENING MUST BE 2-INCHES (5.08 CM) LARGER THAN THE DUCT (ALL THE WAY AROUND). THE DUCT MUST BE CENTERED WITHIN THIS OPENING.

MAN6576

**IMPORTANT:** The dryer must be connected to the electric supply shown on the data label. In the case of 208 VAC or 230/240 VAC, the supply voltage must match the electric service specifications of the data label exactly.

The wire size must be properly sized to handle the related current.

**⚠ WARNING**

**208 VAC and 230/240 VAC are not the same. Any damage done to dryer components due to improper voltage connections will automatically void the warranty.**

**NOTE:** Component failure due to improper voltage application will void the warranty.

The manufacturer reserves the right to make changes in specifications at any time without notice or obligation.

### Electrical Service Specifications

#### Gas and Steam Models Only

ELECTRICAL SERVICE SPECIFICATIONS (PER DRYER)					
<b>IMPORTANT:</b> 208 VAC AND 230/240 VAC ARE NOT THE SAME. When ordering, specify exact voltage.					
<b>NOTES:</b> A. When fuses are used they must be dual element, time delay, current limiting, class RK1 or RK5 ONLY. Calculate/determine correct fuse value, by applying either local and/or National Electrical Codes to listed appliance amp draw data. B. Circuit breakers are thermal-magnetic (industrial) motor curve type ONLY. For others, calculate/verify correct breaker size according to appliance amp draw rating and type of breaker used. C. Circuit breakers for 3-phase (3ø) dryers must be 3-pole type.					
SERVICE VOLTAGE	PHASE	WIRE SERVICE	APPROX. AMP DRAW		CIRCUIT BREAKER
			60 Hz	50 Hz	
<b>NON-REVERSING</b>					
120	1ø	2	13	—	20
208	1ø	2	7.6	—	15
220	1ø	2	7.3	8.6	15
230	1ø	2	—	8	15
240	1ø	2	7	8	15
208	3ø	3	4.7	—	15
220	3ø	3	4.8	4.8	15
230	3ø	3	—	4.7	15
240	3ø	3	4.9	5.4	15
380	3ø	3	2.9	—	15
380 / 416	3ø	4 or 3	—	3.1	15
400	3ø	3	3	—	15
400	3ø	4 or 3	—	3.2	15
440	3ø	3	2.6	—	15
460 / 480	3ø	3	2.8	—	15
<b>REVERSING</b>					
208	3ø	3	6.7	—	15
220	3ø	3	6.9	7.3	15
230	3ø	3	—	7.5	15
240	3ø	3	7.1	8.3	15
380	3ø	3	4.2	—	15
380	3ø	4 or 3	—	4.3	15
400	3ø	3	4.4	—	15
400 / 416	3ø	4 or 3	—	4.4	15
440	3ø	3	3.6	—	15
460 / 480	3ø	3	3.9	—	15
575	3ø	3	3.3	—	15

Check your local code for breaker and wire size

6/9/15

### Electric Models Only

All electrically heated dryers must be connected to the electric service shown on the dryer's data label. The connecting wires must be properly sized to handle the rated current.

ELECTRICAL SERVICE SPECIFICATIONS (PER DRYER)						
<b>IMPORTANT:</b> 208 VAC AND 230/240 VAC ARE NOT THE SAME. When ordering, specify exact voltage.						
<b>NOTES:</b> A. When fuses are used they must be dual element, time delay, current limiting, class RK1 or RK5 ONLY. Calculate/determine correct fuse value, by applying either local and/or National Electrical Codes to listed appliance amp draw data. B. Circuit breakers are thermal-magnetic (industrial) type ONLY. For others, calculate/verify correct breaker size according to appliance amp draw rating and type of breaker used. C. Circuit breakers for 3-phase (3ø) dryers must be 3-pole type.						
SERVICE VOLTAGE	PHASE	WIRE SERVICE	OVEN KW	APPROX. AMP DRAW		CIRCUIT BREAKER
				60 Hz	50 Hz	
<b>NON-REVERSING</b>						
208	1ø	2	24	123	—	175
220	1ø	2	20	98	—	125
230	1ø	2	22	97	—	125
240	1ø	2	24	107	108	150
208	1ø	2	30	152	—	200
220	1ø	2	26	125	127	175
230	1ø	2	28	123	130	175
240	1ø	2	30	132	133	175
220	1ø	2	20	—	100	150
230	1ø	2	22	—	104	150
208	3ø	3	24	74	—	100
220	3ø	3	20	60	61	80
230	3ø	3	22	56	63	80
240	3ø	3	24	65	66	90
208	3ø	3	30	91	—	125
220	3ø	3	30	86	—	125
220	3ø	3	26	76	77	100
230	3ø	3	28	71	78	100
240	3ø	3	30	79	—	100
240	3ø	3	30	—	80	125
416	3ø	4	30	49	50	70
380	3ø	4	20	—	39	50
400	3ø	4	22	—	40	60
416	3ø	4	24	—	41	60
380	3ø	4	26	—	48	70
400	3ø	4	28	—	48	70
208	3ø	3	24	71	—	90
220	3ø	3	20	57	57	80
240	3ø	3	24	63	63	80
380	3ø	3	20	33	—	50
440	3ø	3	20	29	—	40
460	3ø	3	22	30	—	40
480	3ø	3	24	32	—	50
208	3ø	3	30	88	—	125
220	3ø	3	26	73	73	100
240	3ø	3	30	77	78	100
380	3ø	3	26	42	—	60
440	3ø	3	26	37	—	50
460	3ø	3	28	38	—	50
480	3ø	3	30	39	—	50
230	3ø	3	22	—	60	80
380	3ø	4 or 3	20	—	33	50
400	3ø	4 or 3	22	—	35	50
416	3ø	4 or 3	24	—	36	50
230	3ø	3	28	—	75	100
380	3ø	4 or 3	26	—	43	60
400	3ø	4 or 3	28	—	44	60
416	3ø	4 or 3	30	—	45	60
440	3ø	4 or 3	26	—	37	50

Check your local code for breaker and wire size

6/9/15

ELECTRICAL SERVICE SPECIFICATIONS (PER DRYER)						
<b>IMPORTANT:</b> 208 VAC AND 230/240 VAC ARE NOT THE SAME. When ordering, specify exact voltage.						
<b>NOTES:</b> A. When fuses are used they must be dual element, time delay, current limiting, class RK1 or RK5 ONLY. Calculate/determine correct fuse value, by applying either local and/or National Electrical Codes to listed appliance amp draw data.						
B. Circuit breakers are thermal-magnetic (industrial) type ONLY. For others, calculate/verify correct breaker size according to appliance amp draw rating and type of breaker used.						
C. Circuit breakers for 3-phase (3ø) dryers must be 3-pole type.						
SERVICE VOLTAGE	PHASE	WIRE SERVICE	OVEN kW	APPROX. AMP DRAW		CIRCUIT BREAKER
				60 Hz	50 Hz	
<b>REVERSING</b>						
208	3ø	3	24	73	—	100
220	3ø	3	20	59	60	80
240	3ø	3	24	65	66	90
380	3ø	3	20	35	—	50
440	3ø	3	20	30	—	40
460	3ø	3	22	32	—	40
480	3ø	3	24	33	—	50
575	3ø	3	24	27	—	40
208	3ø	3	30	90	—	125
220	3ø	3	26	75	76	100
240	3ø	3	30	79	—	100
380	3ø	3	26	44	—	60
440	3ø	3	26	38	—	50
460	3ø	3	28	39	—	50
480	3ø	3	30	40	—	60
575	3ø	3	30	33	—	50
230	3ø	3	22	—	63	80
380	3ø	4 or 3	20	—	35	50
400	3ø	4 or 3	22	—	36	50
416	3ø	4 or 3	24	—	38	50
230	3ø	3	28	—	78	100
240	3ø	3	30	—	80	125
380	3ø	4 or 3	26	—	44	60
400	3ø	4 or 3	28	—	45	60
416	3ø	4 or 3	30	—	46	60
440	3ø	4 or 3	26	—	38	50

Check your local code for breaker and wire size

6/9/15

## Grounding

A ground (earth) connection must be provided and installed in accordance with state and local codes. In the absence of these codes, grounding must conform to applicable requirements of the National Electrical Code ANSI/NFPA NO. 70-LATEST EDITION, or in Canada, the installation must conform to applicable Canada Standards: Canadian Electrical Codes Parts 1 & 2 CSA C22.1-1990 or LATEST EDITION. The ground connection may be to a proven earth ground at the location service panel.

For added personal safety, when possible, it is suggested that a separate ground wire (no. 18 minimum) be connected from the ground connection of the dryer to a grounded cold water pipe. Do not ground to a gas pipe or hot water pipe. The grounded cold water pipe must have metal-to-metal connection all the way to the electrical ground. If there are any nonmetallic interruptions, such as, a meter, pump, plastic, rubber, or other insulating connectors, they must be jumped out with no. 4 copper wire and securely clamped to bare metal at both ends.

**IMPORTANT:** For personal safety and proper operation, the dryer must be grounded.

Provisions are made for ground connection in each dryer at the electrical service connection area.

## Electrical Connections

A wiring diagram is located inside the control box for connection data.



If local codes permit, power to the dryer can be made by the use of a flexible UL listed power cord/pigtail (wire size must conform to rating of dryer), or the dryer can be hard wired directly to the service breaker panel. In both cases, a strain relief must be installed where the wiring enters the dryer.

## Gas and Steam Models Only

**IMPORTANT:** A separate protected circuit must be provided to each dryer.


## Single-Phase (1ø) Wiring Connections / Hookup

The electrical input connections on all single-phase (1ø) gas dryers and steam dryers are made into the rear service box located at the upper left area of the dryer.

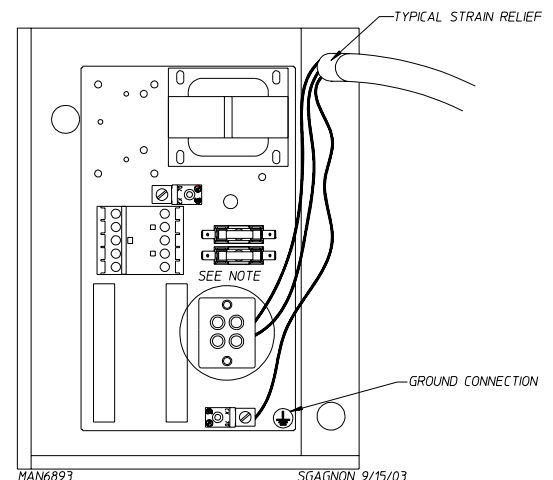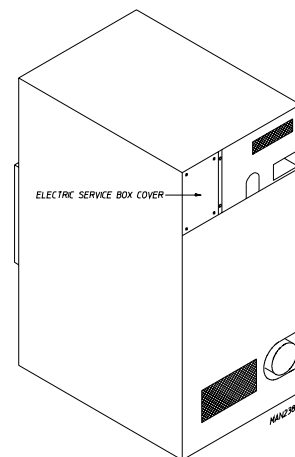


Single-Phase Electrical Lead Connections		
Black + Positive	White or Red + Neutral or L2	Green + Ground

## For 110V Applications

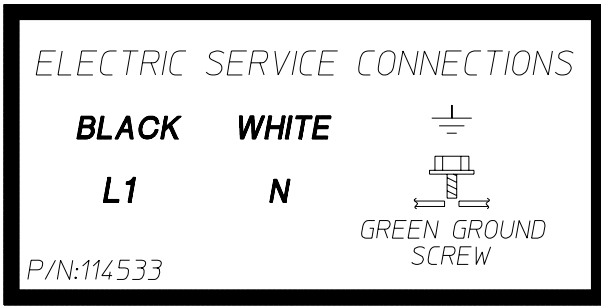

MAN6886


SGAGNON 9/15/03

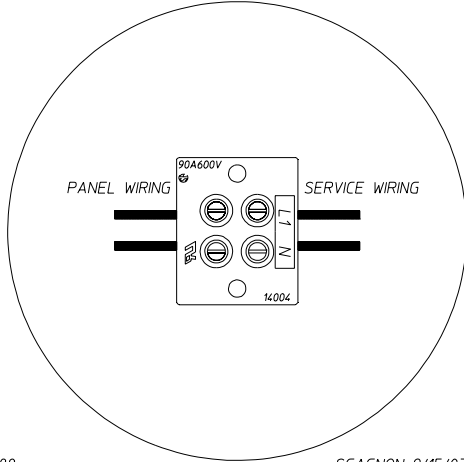

MAN6888


SGAGNON 9/15/03

## For 208-230/240V Applications

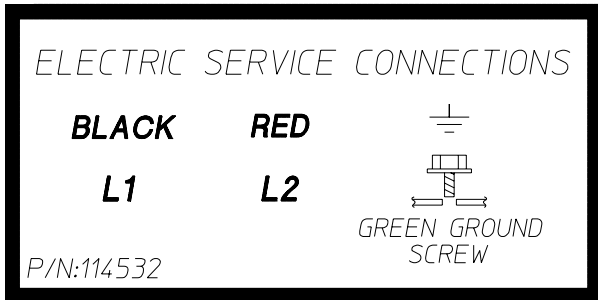

MAN6887

SGAGNON 9/15/03

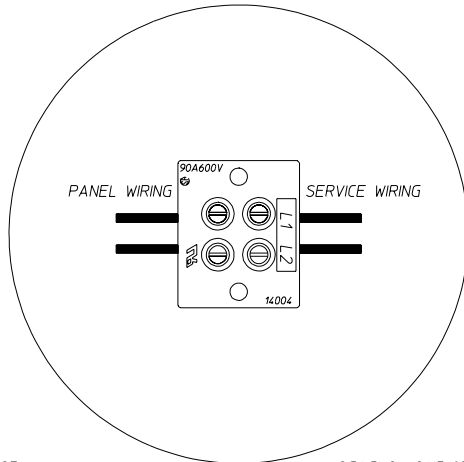



MAN6897

SGAGNON 9/15/03

A ground lug is provided in the rear electrical box to connect your service ground.

## 3-Phase (3 $\phi$ ) Wiring Connections / Hookup

The electrical connections on all 3-phase (3 $\phi$ ) gas and steam dryers are made into the rear service box located at the upper left area of the dryer. The electrical connections are made at the power distribution block located in the service box. The ground connection is made to the copper lug, also provided in this box. To gain access, the service box cover must be removed.

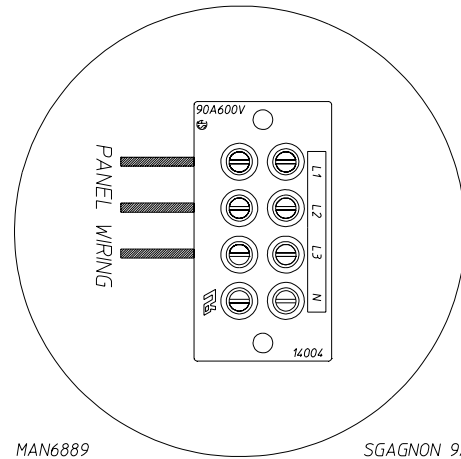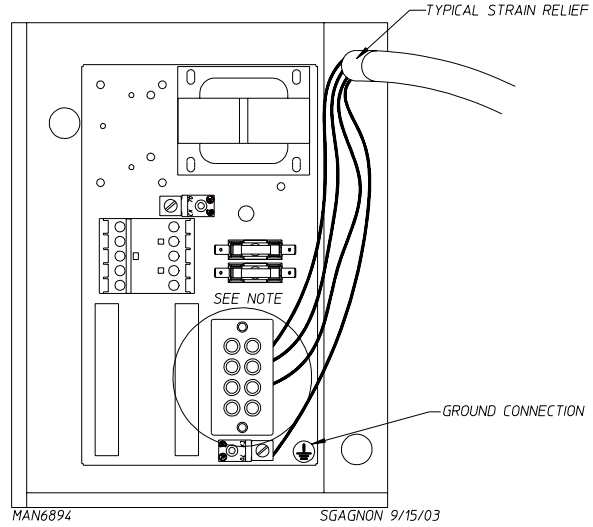

MAN6889

SGAGNON 9/15/03

The neutral will only be used on 4-wire service. This is typical for 380-416V, 50 Hz.


### Electrically Heated Models Only

The only electrical input connections to the dryer are the 3-phase (3 $\phi$ ) power leads (L1, L2, L3, and sometimes neutral) and ground. Single-phase (1 $\phi$ ) power for the control circuit and for any single-phase (1 $\phi$ ) motors (if present) is done internally to the dryer by the factory at the oven contactor. No single-phase (1 $\phi$ ) input connection is required on a 3-phase (3 $\phi$ ) dryer.

**CAUTION: The dryer must be grounded. A ground lug has been provided for this purpose.**

Input connection wiring must be sized properly to handle the dryer's current draw. This information is printed on the dryer's data label.



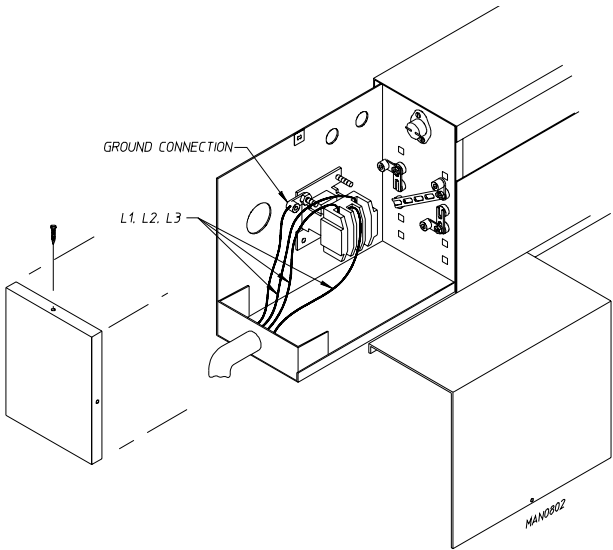

The electrical input connections are made at the electric oven contactor located inside the assembly at the rear center upper section of the dryer. The ground connection is made to a copper lug also provided in this area. To gain access, remove oven rear service cover.

**IMPORTANT:** A strain relief must be used where the input wiring enters the oven assembly.

## Gas Information

It is your responsibility to have all plumbing connections made by a qualified professional to ensure that the gas plumbing installation is adequate and conforms to local and state regulations or codes. In the absence of such codes, all plumbing connections, materials, and workmanship must conform to the applicable requirements of the National Fuel Gas Code ANSI Z223.1-LATEST EDITION, or in Canada, the Canadian Installation Codes CAN/CGA-B149.1-M91 (Natural Gas) or CAN/CGA-B149.2-M91 (L.P. Gas) or LATEST EDITION.

In Australia, the fuel gas code is AS/NZS5601, local authority, gas, electricity, and any other relevant statutory regulations.

**IMPORTANT:** Failure to comply with these codes or ordinances, and/or the requirements stipulated in this manual, can result in personal injury and improper operation of the dryer.

The dryer and its individual shutoff valves must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psig (3.5 kPa). The dryer must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure test of the gas supply system at test pressures equal to or less than 1/2 psig (3.5 kPa).

**IMPORTANT:** Failure to isolate or disconnect dryer from supply as noted can cause irreparable damage to the gas valve, which will void the warranty.

**⚠ WARNING**

**Fire or explosion could result due to failure of isolating or disconnecting the gas supply as noted.**

## Gas Supply

The gas dryer installation must meet the American National Standard...National Fuel Gas Code ANSI Z223.1-LATEST EDITION, or in Canada, the Canadian Installation Codes CAN/CGA-B149.1 M91 (Natural Gas) or CAN/CGA-B149.2-M91 (L.P. Gas) or LATEST EDITION, as well as local codes and ordinances and must be done by a qualified professional.

**NOTE:** Undersized gas piping will result in ignition problems, slow drying, increased use of energy, and can create a safety hazard.

The dryer must be connected to the type of heat/gas indicated on the dryer data label. If this information does not agree with the type of gas available, do not operate the dryer. Contact the reseller who sold the dryer or contact the ADC factory.

**IMPORTANT:** Any burner changes or conversions must be made by a qualified professional.

The input ratings shown on the dryer data label are for elevations up to 2,000 feet (609.6 meters), unless elevation requirements of over 2,000 feet (609.6 meters) were specified at the time the dryer order was placed with the factory. The adjustment or conversion of dryers in the field for elevations over 2,000 feet (609.6 meters) is made by changing each burner orifice. If this conversion is necessary, contact the reseller who sold the dryer or contact the ADC factory.

**IMPORTANT:** This gas dryer is not provided with an internal gas supply shutoff and an external gas supply shutoff must be provided.

## Technical Gas Data

### Gas Specifications

Type of Gas	Manifold Pressure*	In-Line Pressure
<b>Natural</b>	3.5 in wc	6.0 - 12.0 in wc
	<b>8.7 mb</b>	<b>14.92 - 29.9 mb</b>
<b>Liquid Propane</b>	10.5 in wc	11.0 in wc
	<b>26.1 mb</b>	<b>27.4 mb</b>

Shaded areas are stated in metric equivalents

\* Measured at outlet side of gas valve pressure tap when gas valve is on.

### Gas Connections

Inlet connection \_\_\_\_\_ 3/4" N.P.T.  
 Inlet supply size \_\_\_\_\_ 3/4" N.P.T. (minimum)  
 Btu/hr input (per dryer) \_\_\_\_\_ 175,000 (44,100 kcal/hr)

### Natural Gas

Regulation is controlled by the dryer's gas valve's internal regulator. Incoming supply pressure must be consistent between a minimum of 6.0 in WC (14.92 mb) and a maximum of 12.0 in WC (29.9 mb) pressure.

## L.P. Gas

Dryers made for use with L.P. gas have the gas valve's internal pressure regulator blocked open so that the gas pressure must be regulated upstream of the dryer. The pressure measured at each gas valve pressure tap must be a consistent 10.5 in WC (26.1 mb). There is no regulator or regulation provided in an L.P. dryer. The water column pressure must be regulated at the source (L.P. tank) or an external regulator must be added to each dryer.

		TYPE OF GAS					
Btu/hr Rating	kcal/hr Rating	Natural			Liquid Propane		
		Qty.	D.M.S.*	Part No.	Qty.	D.M.S.*	Part No.
175,000	44,100	4	#30	140819	4	#49	140803
Liquid Propane Conversion Kit Part Number 882230							

Shaded area is stated in metric equivalent

\* D.M.S. equivalents are as follows:

Natural Gas ..... #30 = 0.1285" (3.2639 mm).  
L.P. Gas ..... #49 = 0.0730" (1.8542 mm).

## Piping / Connections


All components/materials must conform to National Fuel Gas Code Specifications ANSI Z223.1-LATEST EDITION, or in Canada, CAN/CGA-B149.1-M91 (Natural Gas) or CAN/CGA-B149.2-M91 (L.P. Gas) or LATEST EDITION (for General Installation and Gas Plumbing), as well as local codes and ordinances and must be done by a qualified professional. It is important that gas pressure regulators meet applicable pressure requirements, and that gas meters be rated for the total amount of all the appliance Btu being supplied.

The dryer is provided with a 3/4" N.P.T. inlet pipe connection located at the right side of the base of the dryer. The minimum pipe size (supply line) to the dryer is 3/4" N.P.T. For ease in servicing, the gas supply line of each dryer must have its own shutoff valve.


The size of the main gas supply line (header) will vary depending on the distance this line travels from the gas meter or, in the case of L.P. gas, the supply tank, other gas-operated appliances on the same line, etc. Specific information regarding supply line size should be determined by the gas supplier.

**NOTE:** Undersized gas supply piping can create a low or inconsistent pressure, which will result in erratic operation of the burner ignition system.

TYPICAL NATURAL GAS INSTALLATION

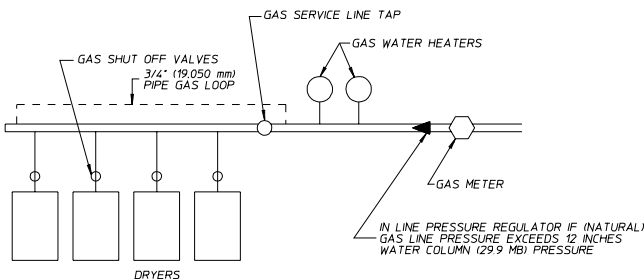

TYPICAL L.P. GAS INSTALLATION

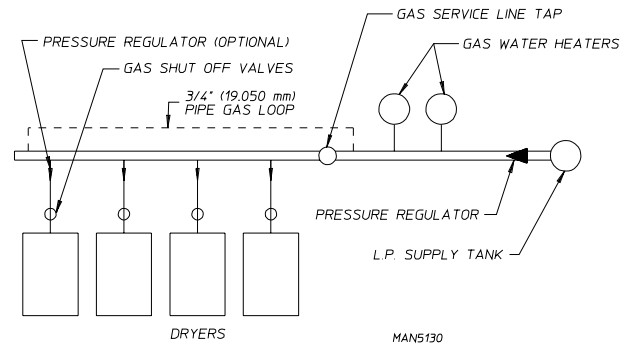

Consistent gas pressure is essential at all gas connections. It is recommended that a 3/4" (19.05 mm) pipe gas loop be installed in the supply line servicing a bank of dryers. An in-line pressure regulator must be installed in the gas supply line (header) if the (natural) gas pressure exceeds 12.0 in WC (29.9 mb) pressure.

**NOTE:** A water column test pressure of 3.5 in WC (8.7 mb) for natural gas and 10.5 in WC (26.1 mb) for L.P. dryers is required at the gas valve pressure tap of each dryer for proper and safe operation.

A 1/8" N.P.T. plugged tap, accessible for a test gauge connection, must be installed in the main gas supply line immediately upstream of each dryer.

**IMPORTANT:** Pipe joint compounds that resist the action of natural gas and L.P. gas must be used.

Test all connections for leaks by brushing on a soapy water solution (liquid detergent works well).

## WARNING

**Never test for leaks with a flame!!!**

All components/materials must conform to National Fuel Gas Code Specifications ANSI Z223.1-LATEST EDITION, or in Canada, CAN/CGA-B149.1-M91 (Natural Gas) or CAN/CGA-B149.2-M91 (L.P. Gas) or LATEST EDITION (for General Installation and Gas Plumbing), as well as local codes and ordinances and must be done by a qualified professional. It is important that gas pressure regulators meet applicable pressure requirements, and that gas meters be rated for the total amount of all the appliance Btu being supplied.

**IMPORTANT:** The dryer and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psig (3.5 kPa).

**NOTE:** The dryer must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure test of the gas supply system at test pressures equal to or less than 1/2 psig (3.5 kPa).

## Steam Information

It is your responsibility to have all plumbing connections made by a qualified professional to ensure that the steam plumbing installation is adequate and conforms with local and state regulations or codes.

Care must be exercised when leveling steam dryers into final position. After leveling the dryer, check the downward pitch of the heat exchanger from front to rear with a level. Likewise, check the downward pitch of the return condensate manifold toward its outlet part. Absence of these downward pitches will result in probable water hammer and premature heat exchanger fracture and leakage.

The presence of condensate in the steam will cause water hammer and subsequent heat exchanger failure. The steam supply connection must be taken from the top of a well-dripped steam main. If the supply run-out to the dryer exceeds 20 feet (6 meters), it should be dripped just before the control valve with a proper trap and dirt pocket.

**IMPORTANT:** Failure to comply with the requirements stipulated in this manual can result in component failure, which will void the warranty.

**NOTE:** In standard format this dryer is manufactured with a pneumatic (piston) damper system, which requires an external supply of air (80 psi +/- 10 psi [5.51 bar +/- 0.68 bar]). This dryer may be provided with an optional steam solenoid valve, in which case, no pneumatic steam damper system is provided.

## Steam Coil pH Level

The normal pH level for copper type steam coils must be maintained between a value of 8.5 to 9.5. For steel type steam coils the pH level must be maintained between a value of 9.5 to 10.5. These limits are set to limit the acid attack of the steam coils.

**IMPORTANT:** Coil failure due to improper pH level will void the warranty.

## Steam Requirement

Operating Steam Pressure		
Maximum	125 psig*	861.84 kPa
Heat Input (Normal Load)	7.2 Boiler hp	
Consumption (Approximate)	275 lb/hr	124.7 kg/hr


Shaded areas are stated in metric equivalents

\* The minimum operating pressure for optimum results is 100 psig (689.47 kPa).

## Installation Instructions

To ensure an adequate supply of steam is provided, be sure that the steam supply line and steam return line are sized and laid out as stipulated in this manual. Inadequate steam supply line and steam return line or improper steam plumbing will result in poor performance and can cause component failure. Clean, dry steam must be provided to the dryer.

**IMPORTANT:** Steam coil failure due to water hammer by wet steam will void the warranty.

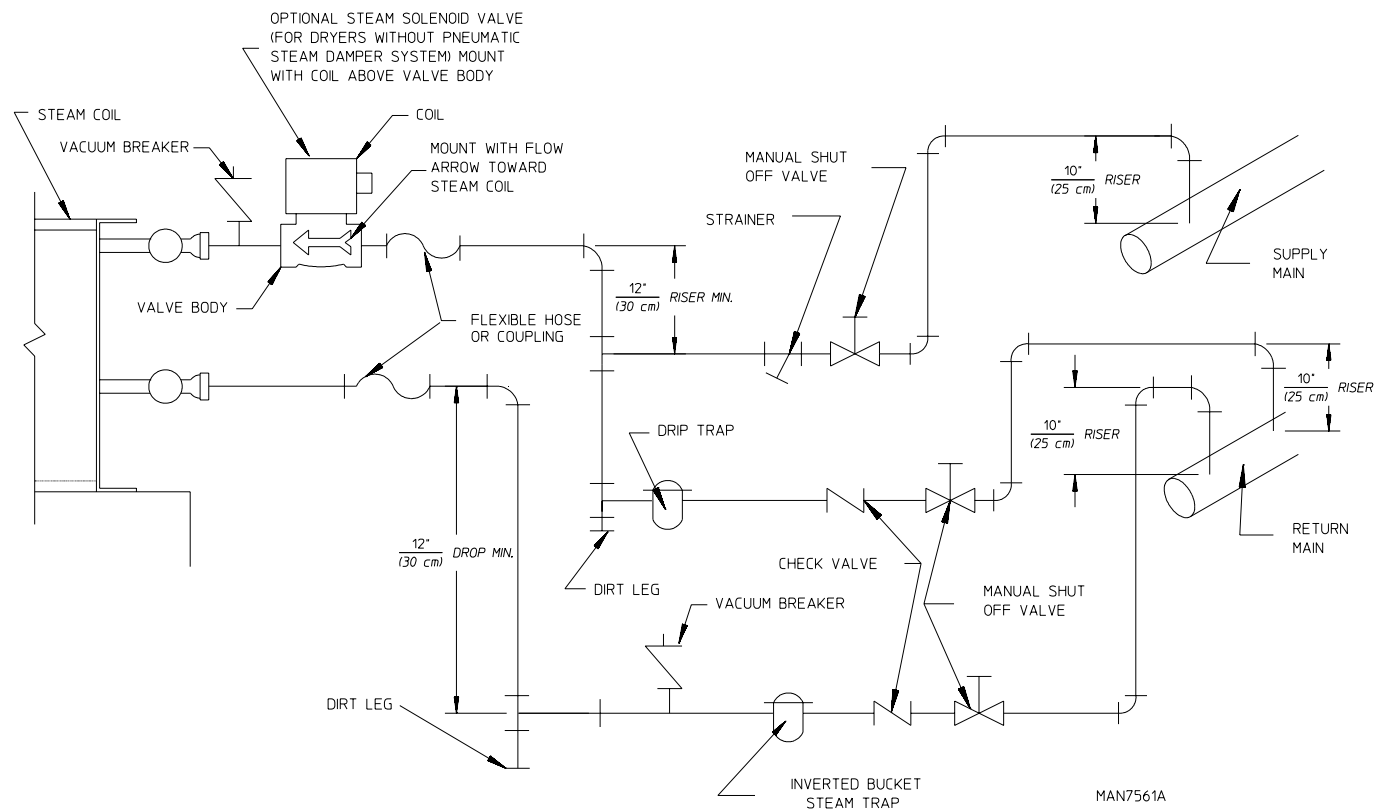

The presence of condensate in the steam supply line will cause water hammer and subsequent heat exchanger (steam coil) failure. The steam supply connection into the main supply line must be made with a minimum 10-inch (25.4 cm) riser. This will prevent any condensate from draining towards the dryer.

The steam supply line to the dryer must include a 12-inch (30.48 cm) riser along with a drip trap and check valve. This will prevent any condensate from entering the steam coil.

Flexible hoses or couplings must be used. The dryer vibrates slightly when it runs and this will cause the steam coil connections to crack if they are hard piped to the supply and return mains.

Shutoff valves for each dryer should be installed in the supply line, return line, and drip trap return line. This will allow the dryer to be isolated from the supply main and the return main if the dryer needs maintenance work.

Install an inverted bucket steam trap and check valve at least 12-inches (30.48 cm) below the steam coil return header, as close to the coil as possible.

A trap with a capacity of 600 lb (273 kg) of condensate per hour at 125 psi (8.62 bar) is needed for each unit.

The supply line and the return line should be insulated. This will save energy and provide for the safety of the operator and maintenance personnel.


Water pockets in the supply line, caused by low points, will provide wet steam to the coil possibly causing steam coil damage. All horizontal runs of steam supply piping should be pitched 1/4-inch (6.35 mm) for every 1 foot (0.30 meters) back towards the steam supply header causing the condensate in the line to drain to the header. Install a bypass trap in any low point to eliminate wet steam.

Dryers with Optional Steam Solenoid Valve: Mount steam solenoid valve in orientation shown, with coil up. The supply line should be supported to prevent damage to the steam coil due to the overhung weight of the steam solenoid valve.

**IMPORTANT:** Flexible hoses/couplings must be used. Coil failure due to hard plumbing connections will void the warranty.

### Steam Damper Air System Connections

In standard format, this dryer is manufactured with a pneumatic (piston) damper system, which requires an external supply of compressed air. (Note: this dryer may be provided with an optional steam solenoid valve in which case no steam damper system is provided.) The air connection is made to the steam damper solenoid valve, which is located at the rear inner top area of the dryer just in front of the electric service relay box.

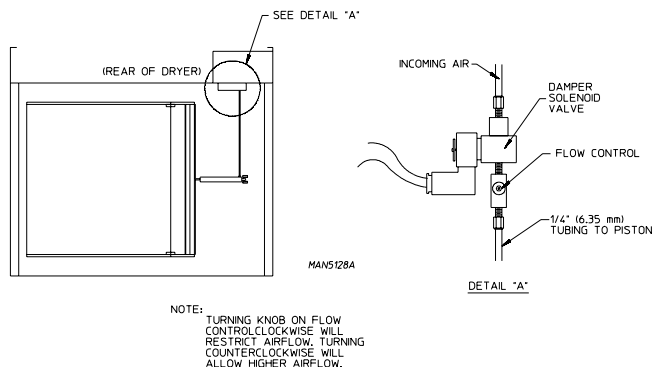

### Air Requirements

Compressed Air Supply	Air Pressure	
Normal	80 psi	5.51 bar
Minimum Supply	70 psi	4.82 bar
Maximum Supply	90 psi	6.21 bar

Shaded areas are stated in metric equivalents

### Air Connection

Air connection to system — 1/8" N.P.T.

### Air Regulation

No air regulator or filtration is provided with the dryer. External regulation/filtration of 80 psi (5.51 bar) must be provided. It is suggested that a regulator/filter gauge arrangement be added to the compressed air line just before the dryer connection. This is necessary to ensure that correct and clean air pressure is achieved.

### Steam Damper System Operation

The steam damper, as shown in the illustration below, allows the coil to stay constantly charged eliminating repeated expansion and contraction. When the damper is opened, the air immediately passes through the already hot coil, providing instant heat to start the drying process. When the damper is closed, ambient air is drawn directly into the tumbler, allowing a rapid cool down.

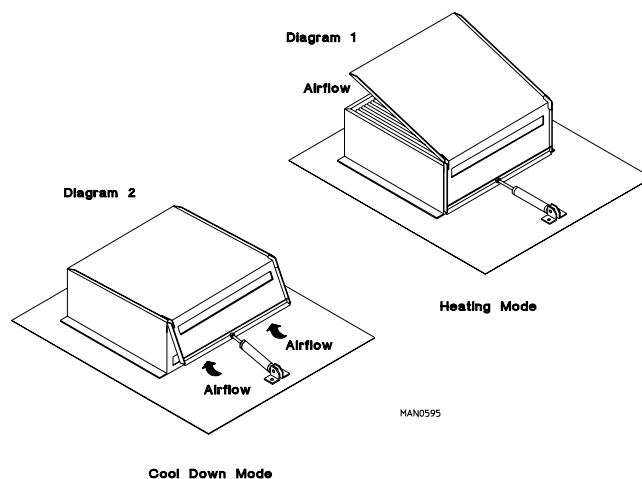



Diagram 1 shows the damper in the heating (open) mode, allowing heat into the tumbler.

Diagram 2 shows the damper in the cool down (closed) mode, pulling ambient air directly into the tumbler without passing through the coils.

**NOTE:** With the dryer off or with no air supply, the steam damper is in cool down mode as shown in Diagram 2.

## Steam Damper Air Piston (Flow Control) Operation Adjustment

Damper operation was tested and adjusted prior to shipping at 80 psi (5.51 bar). If damper air adjustment is necessary, locate the flow control valve and make the necessary adjustments as noted below.

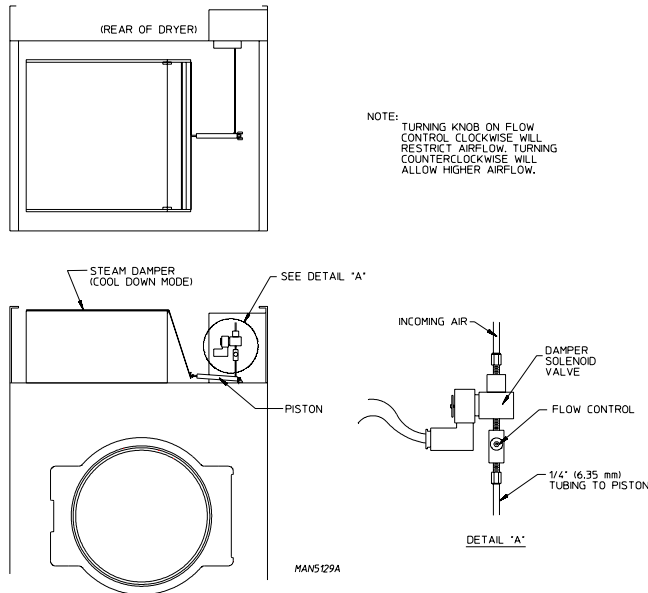

## Preparation for Operation / Start-Up

The following items should be checked before attempting to operate the dryer:

Read all "Caution," "Warning," and "Direction" labels attached to the dryer.

Check incoming supply voltage to be sure that it is the same as indicated on the dryer data label. In the case of 208 VAC or 230/240 VAC, the supply voltage must match the electric service specifications of the data exactly.

**GAS MODELS** – Check to ensure that the dryer is connected to the type of heat/gas indicated on the dryer data label.

**GAS AND ELECTRIC MODELS** – The sail switch damper assembly was installed and adjusted at the factory prior to shipping. However, each sail switch adjustment must be checked to ensure that this important safety control is functioning.

Check bolts, nuts, screws, terminals, and fittings for tightness and security.

**GAS MODELS** – Be sure that all gas shutoff valves are in the open position.

Check all back guard panels and service box covers have been replaced.

Check the lint drawer to ensure that it is closed and secured in place.

Rotate the tumbler (drum) by hand to be sure it moves freely.

**STEAM MODELS** – Check to ensure that a clean, dry, and regulated air supply (80 psi [5.51 bar]) is on the dryer (with air-operated damper system only).

**STEAM MODELS** – Check to ensure all steam shutoff valves are open.

**STEAM MODELS** – Check steam damper operation.

Check tumbler bearing setscrews to ensure that they are all tight.

Check vent is connected to the dryer and is exhausted to the outdoors.

There should be a source of fresh air entering the room. This source should not be near where the dryers exhaust to the outside.

## Preoperational Test

All dryers are thoroughly tested and inspected before leaving the factory. However, a preoperational test should be performed before the dryer is publicly used. It is possible that adjustments have changed in transit or due to marginal location (installation) conditions. Installer must instruct the user on how to correctly operate the dryer before leaving.

Turn on electric power to the dryer.

Refer to the Operating Instructions for starting your particular model dryer.

## Gas Models Only

When a gas dryer is first started (during initial start-up), it has a tendency not to ignite on the first ignition attempt. This is because the gas supply piping is filled with air, so it may take a few minutes for the air to be purged from the lines.

**NOTE:** During the purging period, check to be sure that all gas shutoff valves are open.

Gas dryers are equipped with a DSI system, which has internal diagnostics. If ignition is not established within three times, the heat circuit in the DSI module will "LOCK OUT" until it is manually reset. To reset the DSI system, open and close the main door and restart the dryer.

A gas pressure test should be taken at the gas valve pressure tap of each dryer to ensure that the water column pressure is correct and consistent.

**NOTE:** Water column pressure requirements (measured at the pressure tap of the gas valve body):

Natural Gas \_\_\_\_\_ 3.5 in WC (8.7 mb)  
L.P. Gas \_\_\_\_\_ 10.5 in WC (26.1 mb)

**IMPORTANT:** There is no regulator provided in an L.P. dryer. The water column pressure must be regulated at the source (L.P. tank), or an external regulator must be added to each dryer.

Make a complete operational check of all safety related circuits:

Door Switch(es)

Hi-Limit Thermostats

Cycling Thermostat

**GAS AND ELECTRIC MODELS ONLY** – Sail Switch

**NOTE:** To check for proper sail switch operation (for gas and electric models only), open the main door and while holding main door switch plunger in, start dryer. Dryer should start but heat circuit should not be activated (on). If the heat system is activated, the sail switch is improperly adjusted and must be adjusted by bending the actuator arm of the sail switch toward the burner box. If the actuator arm is bent too far toward the burner box of the dryer, the dryer may not have heat when needed. After any adjustment to the sail switch, the above procedure must be repeated to verify proper operation of the sail switch.

Make a complete operational check of all operating controls.

**NOTE:** If computer program changes are required, refer to the computer programming section of the manual supplied with the dryer.

The dryer should be operated through one complete cycle to ensure that no further adjustments are necessary and that all components are functioning properly.

## Tumbler Coating

The tumbler is treated with a protective coating. We suggest dampening old garments or cloth material with a solution of water and nonflammable mild detergent and tumbling them in the tumbler to remove this coating.

Check the electric service phase sequence (3-phase [3Ø] models only). While the dryer is operating, check to see if the blower (impellor/fan) wheel is rotating in the proper direction. Looking from the front, the blower (impellor/fan) wheel should spin in the clockwise direction. If it is, the phasing is correct. If the phasing is incorrect, reverse two of the three leads at connections L1, L2, and L3 of the power supply to the dryer.

**IMPORTANT:** If the blower (impellor/fan) wheel is rotating in the wrong direction, this will not only drastically reduce drying efficiency, but it can also cause premature component failure.

## Preoperational Instructions

### Coin Models

#### Microprocessor Controller (Computer)

When the microprocessor controller (computer) is in the ready state, the L.C.D. screen will display "Ready, Insert \$XX.XX (amount) to Start".

Insert coin(s). Once the correct "Amount to Start" has been inserted, the L.C.D. will display "Select Temperature".

Select temperature by pressing "HI," "MED," or "LO." The cycle will start and the L.C.D. will display the Dry Cycle selected and the remaining time.

The dryer will continue through the drying and cooling cycles, until the vended time has expired.

**NOTE:** To stop dryer, open main door or pressing the pause key. Continuation of the cycle will resume only after the door has been closed and any of the three temperature selection is pressed.

Upon completion of the drying and cooling cycles, the tone (buzzer) will sound and the dryer will go into the Anti-Wrinkle Mode for 99 minutes, or until the main door has been opened.

**IMPORTANT:** For more detailed information regarding the microprocessor controller (computer) on your dryer, refer to the microprocessor user's manual included with the dryer.

### Mechanical Drop / Rotary Coin Meter or Slide Coin Meter

Insert coin and turn knob (rotary type meter), or for slide meter unit, push in coin chute.

Select temperature.

Push the "Start" button.

To stop dryer, open the main door.

## Non-Coin Models

### Microprocessor Controller (Computer)

The L.E.D. display reads "READY" (no cycle in progress).

Press the letter on the keypad corresponding to the cycle desired (i.e., key "D").

**NOTE:** "0-40" will require the "START/ENTER"  key to be pressed after the number is selected in order to accept the selection and start drying.

The dryer will then start. (I.E., blower, tumbler, and heat.)

The L.E.D. display will read MANUAL DRYING CYCLE D, 00:00 MIN REMAIN.

**NOTE:** Press and hold the "UP ARROW" to view the tumbler temperature at any time.

The dryer can be stopped at any time by pressing the "STOP/CLEAR"  key, at this time the dryer will go into a cycle pause. If the "STOP/CLEAR"  key is pressed again at this point, the cycle that was in progress will be cancelled and returned to the "READY" state.

Press and hold the "DOWN ARROW" to view the tumbler RPM.

When the programmed drying time has expired, the Phase 7 non-coin microprocessor controller (computer) will proceed into the Cool Down Cycle.

Once the Cool Down Cycle begins at the end of the heat cycle, the L.E.D. display will read COOL DOWN TEMP \_\_\_/\_\_\_ MINUTES REMAINING. At the end of the heat cycle, the dryer will shut off the heat and continue the fan and tumbler until the Cool Down Time or temperature is reached.

**IMPORTANT:** For more detailed information regarding the microprocessor controller (computer) on your dryer, refer to the microprocessor user's manual included with the dryer.

## Dual Timer Dryers


Turn drying timer knob for a time of 20 minutes.

Select "High Temp."

Push "Push to Start" button.

To stop dryer, open the main door.

Spin and dwell (stop) times are adjustable at the reversing timer.

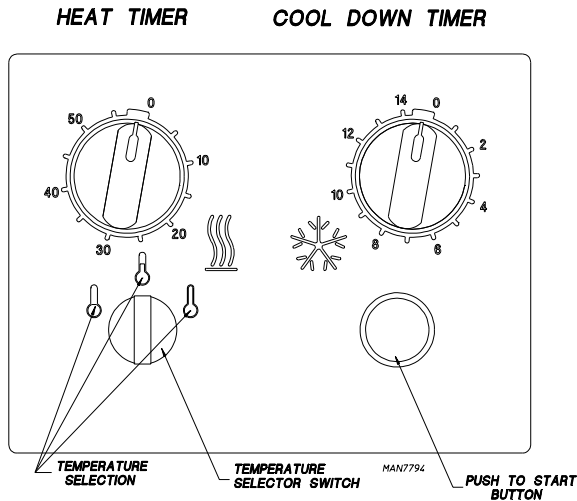


## Reversing Timer Spin / Dwell Adjustments

Timer models have an electronic reversing timer in the electrical service box, which is located in the upper left rear area of the dryer.

Both the Dwell (stop) Time and the tumbler Spin Time are adjustable by mode selection switches located on the electronic timer (as noted in the illustration below).

TIMING LEGEND					
<b>SPIN TIME</b>					
Adjustment Position Number	1	2	3	4	5
Time in Seconds*	30	60	90	120	150
<b>DWELL (STOP) TIME</b>					
Adjustment Position Number	1	2	3	4	5
Time in Seconds*	5	6.3	7.6	8.9	10.2
* Values shown are +/- 1-second.					

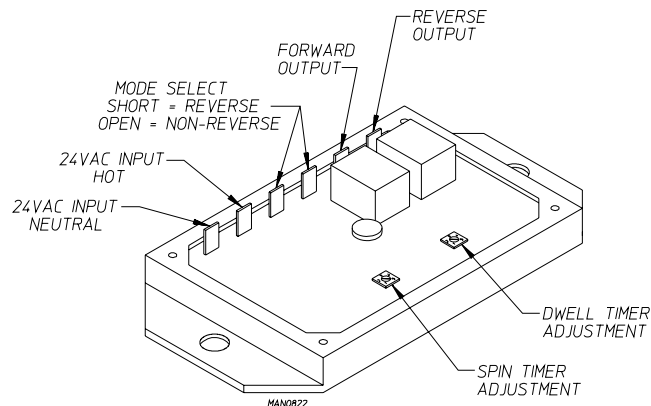

## Shutdown Instructions

If the dryer is to be shutdown (taken out of service) for a period of time, the following must be performed:

Discontinue power to the dryer either at the external disconnect switch or the circuit breaker.

Discontinue the heat supply:

GAS MODELS – discontinue the gas supply.

SHUT OFF external gas supply shutoff valve.

STEAM MODELS – discontinue the steam supply.

SHUT OFF external (location furnished) shutoff valve.

## Service / Parts Information

### Service

Service must be performed by a qualified trained technician, service agency, or gas supplier. If service is required, contact the reseller from whom the ADC equipment was purchased. If the reseller cannot be contacted or is unknown, contact the ADC Service Department for a reseller in your area.

**NOTE:** When contacting the ADC Service Department, be sure to give them the correct model number and serial number so that your inquiry is handled in an expeditious manner.

### Parts

Replacement parts should be purchased from the reseller from whom the ADC equipment was purchased. If the reseller cannot be contacted or is unknown, contact the ADC Parts Department for a reseller in your area. Parts may also be purchased directly from the factory by calling the ADC Parts Department at (508) 678-9000 or you may FAX in your order at (508) 678-9447.

**NOTE:** When ordering replacement parts from the ADC reseller or the ADC factory be sure to give them the correct model number and serial number so that your parts order can be processed in an expeditious manner.

## Warranty Information

### Returning Warranty Cards

Before any dryer leaves the ADC factory test area, a warranty card is placed on the back side of the main door glass. These warranty cards are intended to serve the customer where we record the individual installation date and warranty information to better serve you should you file a warranty claim.

If a warranty card did not come with your dryer, contact the ADC Warranty Department or the ADC Service Department at (508) 678-9000.

**IMPORTANT:** A separate warranty card must be completed and returned for each individual dryer.

**NOTE:** Be sure to include the installation date when returning the warranty card(s).

## Warranty

For a copy of the ADC commercial warranty covering your particular dryer(s), contact the ADC reseller from whom you purchased the equipment and request a dryer warranty form. If the reseller cannot be contacted or is unknown, warranty information can be obtained from the factory by contacting the ADC Warranty Department at (508) 678-9000.

**NOTE:** Whenever contacting the ADC factory for warranty information, be sure to have the dryer's model number and serial number available so that your inquiry can be handled in an expeditious manner.

## Returning Warranty Parts

All dryer or parts warranty claims or inquiries should be addressed to the ADC Warranty Parts Department. To expedite processing, the following procedures must be followed:

No parts are to be returned to ADC without prior written authorization (R.M.A.) from the factory.

**NOTE:** An R.M.A. is valid for only thirty days from date of issue.

The R.M.A. issued by the factory, as well as any other correspondence pertaining to the returned part(s), must be included inside the package with the failed merchandise.

Each part must be tagged with the following information:

Model number and serial number of the dryer from which part was removed.

Nature of failure (be specific).

Date of dryer installation.

Date of part failure.

Specify whether the part(s) being returned is for a replacement, a credit, or a refund.

**NOTE:** If a part is marked for a credit or a refund, the invoice number covering the purchase of the replacement part must be provided.

Warranty tags (ADC P/N 450064) are available at "no charge" from ADC upon request.

The company returning the part(s) must clearly note the complete company name and address on the outside of the package.

All returns must be properly packaged to ensure that they are not damaged in transit. Damage claims are the responsibility of the shipper.

**IMPORTANT:** No replacements, credits, or refunds will be issued for merchandise damaged in transit.

All returns should be shipped to the ADC factory in such a manner that they are insured and a proof of delivery can be obtained by the sender.

Shipping charges are not the responsibility of ADC. All returns should be "prepaid" to the factory. Any "C.O.D." or "COLLECT" returns will not be accepted.

**IMPORTANT:** No replacements, credits, or refunds will be issued if the claim cannot be processed due to insufficient information. The party filing the claim will be notified in writing, either by "FAX" or "CERTIFIED MAIL – Return Receipt Requested," as to the information necessary to process claim. If reply is not received by the ADC Warranty Department within thirty days from the FAX/letter date, then no replacements, credits, or refunds will be issued, and the merchandise will be discarded.

## Routine Maintenance

### Cleaning

A program and/or schedule should be established for periodic inspection, cleaning, and removal of lint from various areas of the dryer, as well as throughout the ductwork system. The frequency of cleaning can best be determined from experience at each location. Maximum operating efficiency is dependent upon proper air circulation. The accumulation of lint can restrict this airflow. If the guidelines in this section are met, an ADC dryer will provide many years of efficient, trouble free, and most importantly safe operation.

### WARNING

**Lint from most fabrics is highly combustible. The accumulation of lint can create a potential fire hazard.**

**Keep dryer area clear and free from combustible materials, gasoline, and other flammable vapors and liquids.**

**NOTE:** Suggested time intervals shown are for average usage, which is considered six to eight operational (running) hours per day.

**IMPORTANT:** Dryer produces combustible lint and must be exhausted to the outdoors. Every 6 months, inspect the exhaust ducting and remove any lint buildup.

### Suggested Cleaning Schedule

#### Every Third or Fourth Load

Clean the lint screen every third or fourth load. A clogged lint screen will cause poor dryer performance. The lint screen is located in a drawer below the main door. Open the lint drawer, brush or vacuum the lint off the lint screen, and remove the lint. Inspect lint screen and replace if torn.

**NOTE:** The frequency of cleaning the lint screen can best be determined from experience at each location.

#### Weekly

Clean lint accumulation from lint chamber, thermostat, and microprocessor temperature sensor (sensor bracket) area.

### WARNING

**To avoid the hazard of electrical shock, discontinue electrical supply to the dryer.**



## Steam Dryers

Clean the steam coil fins. We suggest using compressed air and a vacuum cleaner with brush attachment.

### **! WARNING**

When cleaning steam coil fins, be careful not to bend the fins. If fins are bent, straighten by using a fin comb, which is available from local air-conditioning supply houses.

## 90 Days

Inspect and remove lint accumulation in customer furnished exhaust ductwork system and from dryer's internal exhaust ducting.

### **! WARNING**

The accumulation of lint in the exhaust ductwork can create a potential fire hazard.

Do not obstruct the flow of combustion and ventilation air.

Inspect and remove any lint accumulation, which can cause the back draft damper to bind or stick.

**NOTE:** A back draft damper that is sticking partially closed can result in slow drying and shutdown of heat circuit safety switches or thermostats.

When cleaning the dryer cabinet(s), avoid using harsh abrasives. A product intended for the cleaning of appliances is recommended.

## Adjustments

### 7 Days After Installation and Every 6 Months Thereafter


Inspect bolts, nuts, screws, setscrews, grounding connections, and nonpermanent gas connections (unions, shutoff valves, and orifices). Motor and drive belts should be examined. Cracked or seriously frayed belts should be replaced. Tighten loose V-belts when necessary. Complete operational check of controls and valves. Complete operational check of all safety devices (door switches, lint drawer switch, sail switch, burner, and hi-limit thermostats).

## Lubrication

The motor bearings, idler bearings, and under normal/most conditions the tumbler bearings are permanently lubricated. It is physically possible to relubricate the tumbler bearings if you choose to do so even though this practice is not necessary. Use Shell Alvania #2 grease or its equivalent. The tumbler bearings used in the dryer do not have a grease fitting. Provisions are made in the bearing housing for the addition of a grease fitting, which can be obtained elsewhere, or from ADC by ordering kit P/N 882159 (includes two fittings).

## Lint Drawer Removal


To remove the lint drawer from the dryer pull drawer out approximately halfway. Rotate/move lint drawer stop hinge (refer to the illustration below) downward and pull drawer out.

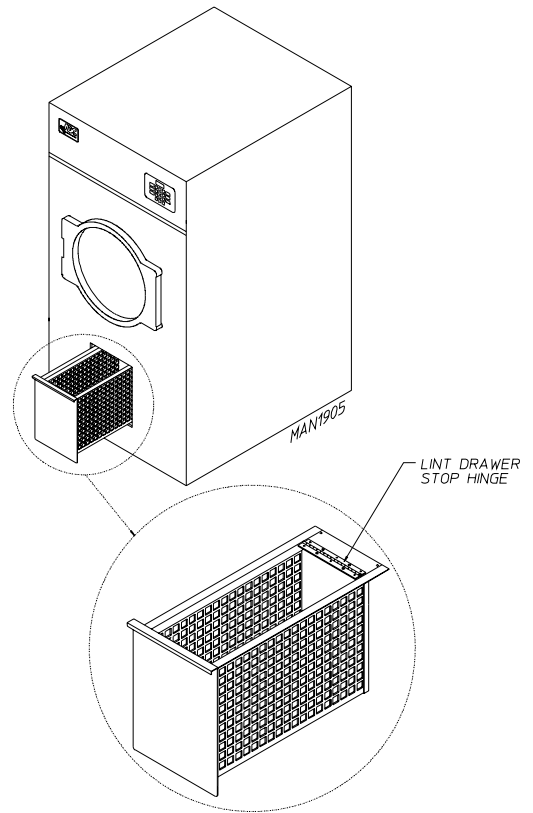


**IMPORTANT:** After replacing the lint drawer back into the dryer, be sure to rotate/move hinge back to the upward stop position.

## Data Label Information


### Standard Label

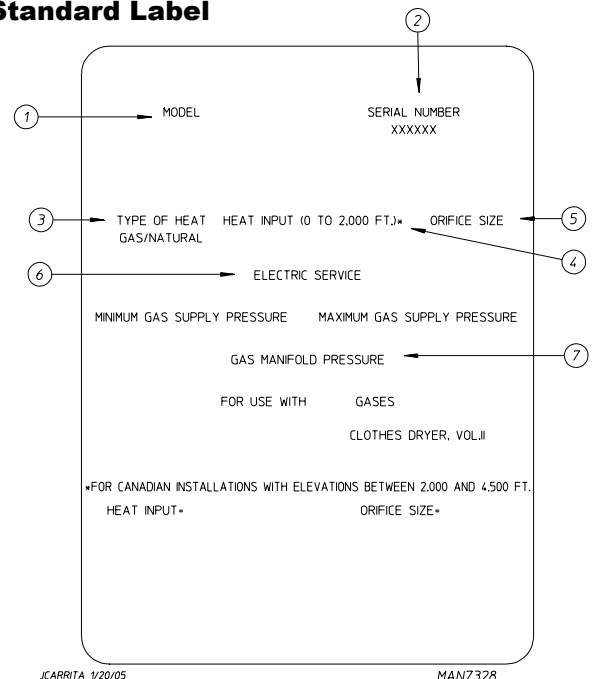

## CE Label

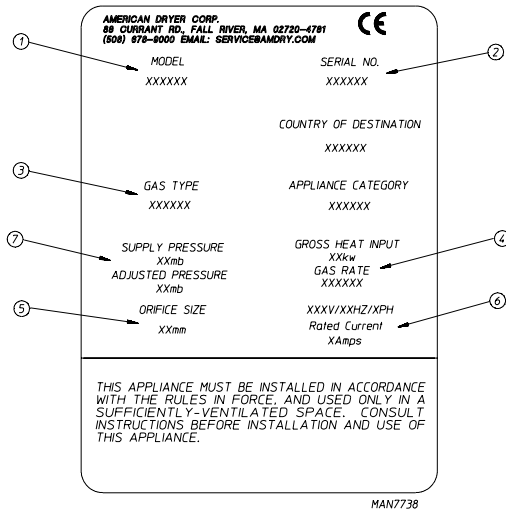

## AGA Label

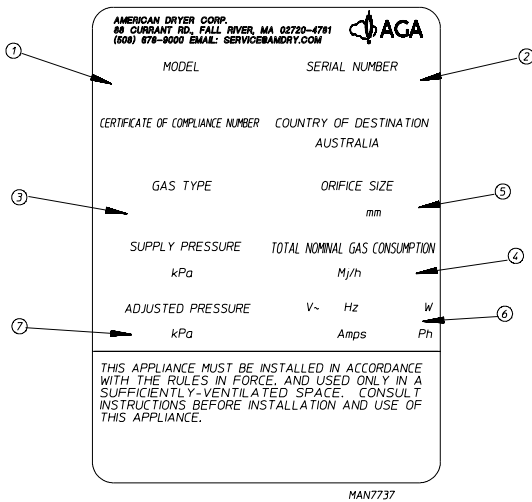

When contacting American Dryer Corporation, certain information is required to ensure proper service/parts information from ADC. This information is on the data label affixed to the upper left side panel area behind the top control (access) door. When contacting ADC, please have the model number and serial number available.


- 1. Model Number** – This describes the style of dryer and type of heat (gas, electric, or steam).
- 2. Serial Number** – Allows the manufacturer to gather information on your particular dryer.
- 3. Type of Heat** – This describes the type of heat for your particular dryer, gas (either natural gas or L.P. gas), electric, or steam.
- 4. Heat Input (For Gas Dryers)** – This describes the heat input in British thermal units per hour (Btu/hr) or kilowatts (kW).
- 5. Orifice Size (For Gas Dryers)** – Gives the number drill size used.
- 6. Electric Service** – This describes the voltage and current rating for a particular model.
- 7. Gas Manifold Pressure (For Gas Dryers)** – This describes the manifold pressure taken at the gas valve tap.

## Procedure for Functional Check of Replacement Components

### Microprocessor Controller (Computer) Board Phase 7 Coin Models

Upon completing installation of the replacement microprocessor controller (computer) board, reestablish power to the dryer.


Start the drying cycle by pressing any temperature selection keys (HI, MED, or LO).

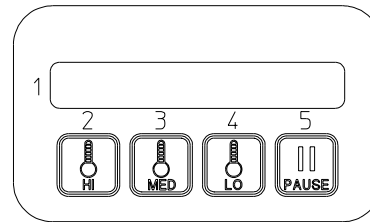

JM 9/17/03

MAN6873

Verify that the applicable indicator lights on the microprocessor controller (computer) board are lit. (Refer to the illustration below.)

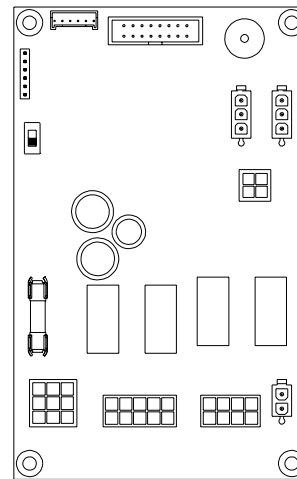


MAN6875

JM 9/11/03

### Phase 7 Non-Coin Models


Upon completing installation of the replacement microprocessor controller (computer) board, reestablish power to the dryer.

Start the drying cycle by pressing any of the preset cycles in letters A-F.

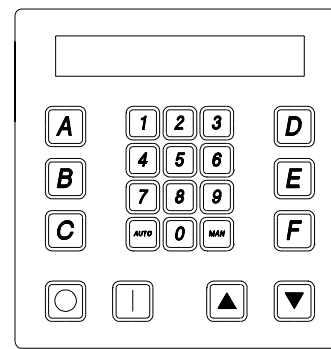


MAN6881

Verify that the applicable indicator lights on the microprocessor controller (computer) board are lit. (Refer to the illustration below.)

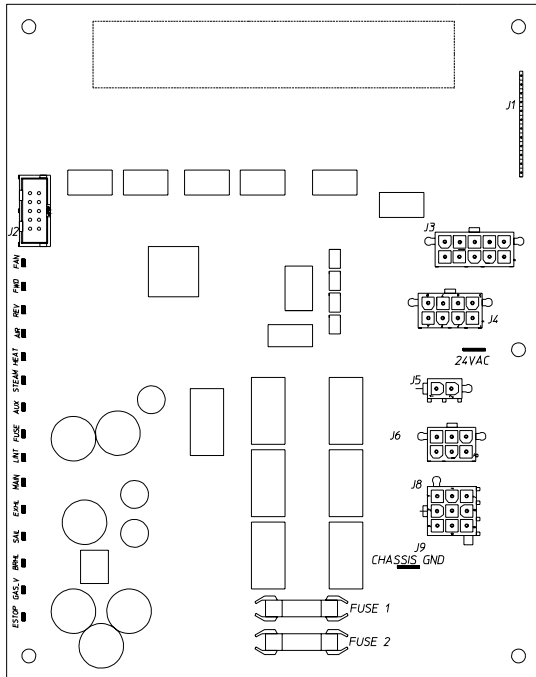

MAN5825

### For Models with DSI Module (Type I)

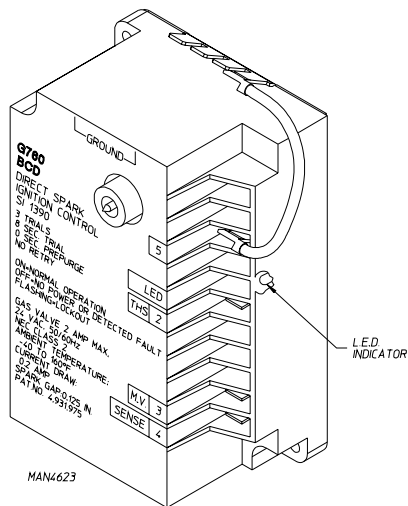


MAN623

**Theory of Operation:** Start the drying cycle. When the gas burner ignites within the chosen trial for ignition time (6-seconds), the flame sensor detects gas burner flame and signals the DSI module to keep the gas valve open as long as there is a call for heat. The DSI module will “LOCKOUT” if the gas burner flame is not sensed at the end of the trial for ignition period. The trial for ignition period will be repeated for a total of three retries/trials (the initial try and two more retries/trials). If the flame is not sensed at the end of the third retry/trial (inter-purge period of 30-seconds), the DSI module will “LOCKOUT” (L.E.D. diagnostic indicator flashes).

A steady L.E.D. indicator indicates normal operation.

No L.E.D. indicator indicates a power or an internal failure has occurred.

### For Models with DSI Module (Type II)

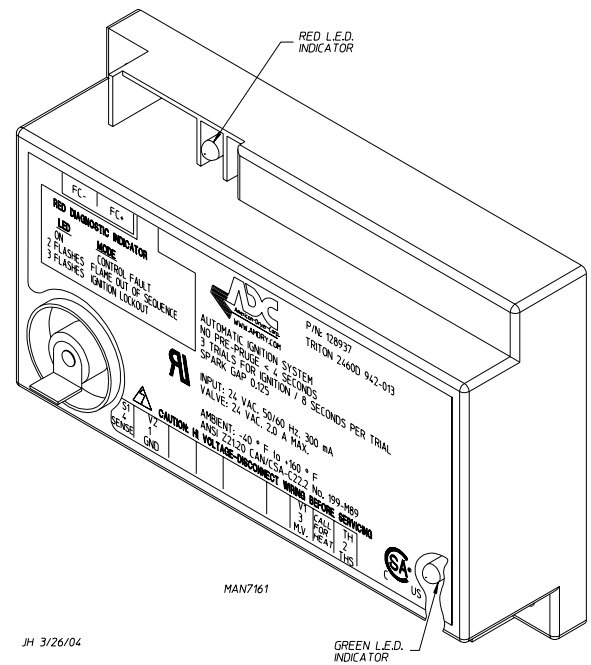

JH 3/26/04

GREEN L.E.D. INDICATOR

**Theory of Operation:** Start the drying cycle. When the gas burner ignites within the chosen trial for ignition time (8-seconds), the flame sensor detects gas burner flame and signals the DSI module to keep the gas valve open as long as there is a call for heat. The DSI module will “LOCKOUT” if the gas burner flame is not sensed at the end of the trial for ignition period. The trial for ignition period will be repeated for a total of three retries/trials (the initial try and two more retries/trials). If the flame is not sensed at the end of the third retry/trial (inter-purge period of 30-seconds), the DSI module will “LOCKOUT” (a red L.E.D. diagnostic indicator will flash).

An unlit red L.E.D. diagnostic indicator indicates normal operation.

A lit green L.E.D. diagnostic indicator indicates dryer controller is calling for heat and that all interlocks have been satisfied.

### Manual Reset Burner Hi-Limit Instructions

#### Phase 7

This dryer was manufactured with a manual reset burner hi-limit thermostat, which is monitored by the Phase 7 computer. If the burner hi-limit is open prior to the start of the drying cycle, the dryer will start momentarily and then shut down, the Phase 7 computer will display “BURNER HIGH LIMIT FAULT” with an audio indication.

If the burner hi-limit opens during a drying cycle, the Phase 7 computer will also display the same error code described above, along with an audio indication. If the drum temperature is above 100° F (38° C), the dryer will continue to run with no heat for 3 minutes or until the drum temperature has dropped below 100° F (38° C). For non-coin models, the clear/stop button on the Phase 7 keypad must be pressed to clear the error condition. For coin models, the pause key must be held down for 3-seconds to clear the fault. The open burner hi-limit must be reset “manually” prior to the start of the next cycle.

## Dual Timer

This dryer was manufactured with a manual reset burner hi-limit thermostat. If the burner hi-limit is open prior to the start of the drying cycle, or during the cycle, the dryer will not recognize the open state of the burner hi-limit and will start or continue through the drying cycle with no heat. Manual reset hi-limit must be reset manually.

This hi-temperature condition may be caused due to a restricted exhaust, poor airflow, or improper burner operation.

The location of the burner hi-limit is on the right side of the burner box, looking at the burner from the back of the dryer.

### **WARNING**

**Discontinue power to dryer before attempting to reset hi-limit.**

#### **IMPORTANT IMPORTANT IMPORTANTE**

HEATING UNIT IS EQUIPPED WITH A HI-LIMIT THERMOSTAT WHICH *MUST BE RESET MANUALLY.*

WARNING - DISCONTINUE POWER TO DRYER BEFORE ATTEMPTING TO RESET HI-LIMIT.

L'ÉLÉMENT CHAUFFANT EST ÉQUIPÉ D'UN THERMOSTAT À LIMITE MAXIMALE QUI *DOIT ÊTRE RÉGLÉ MANUELLEMENT.*

MISE EN GARDE - COUPER LE COURANT D'ALIMENTATION DU SÈCHE-LINGE AVANT DE RÉGLER LA LIMITE MAXIMALE.

LA UNIDAD DE CALENTAMIENTO ESTÁ EQUIPADA CON UN TERMOSTATO DE LIMITE SUPERIOR *QUE DEBE REINICIARSE MANUAMENTE.*

ADVERTENCIA - DESCONECTE LA ALIMENTACIÓN ELÉCTRICA A LA SECADORA ANTES DE REINICIAR EL LIMITE SUPERIOR.

ADC PIN: 114076

## Fire Suppression System

The exclusive Fire Suppression System will extinguish fires that may start in the drying tumbler. A series of sensors positioned throughout the tumbler and interfaced with the microprocessor will trigger the fire suppression system water jet(s) to quickly extinguish the flames. The water jet(s) remain on for 2 minutes and will automatically activate again if a fire condition remains or reignites. While the water jet(s) are activated, the tumbler will jog to move the water throughout the load. The microprocessor will display that the system was activated and will continue to display until the dryer is attended to.

We have tried to make this manual as complete as possible and hope you will find it useful. The manufacturer reserves the right to make changes from time to time, without notice or obligation, in prices, specifications, colors, and material, and to change or discontinue models.

### Before You Start!

#### Check Local Codes and Permits

Call your local water company or the proper municipal authority for information regarding local codes.

**IMPORTANT:** It is your responsibility to have all plumbing connections made by a qualified professional to ensure that the plumbing installation is adequate and conforms to local, state, and federal regulations or codes.

It is the installation or owners responsibility to see that the necessary or required water, water pressure, pipe size, or connections are provided. The manufacturer assumes no responsibility if the fire suppression system is not connected, installed, or maintained properly.

## Installation

### Requirements

The fire suppression system must be supplied with a minimum water pipe size of 1/2" and be provided with 40 psi +/- 20 psi (2.75 bar +/- 1.37 bar) of pressure. For use of optional manual bypass, a second source with the same piping and pressure requirements is required.

Flexible 1/2 feeds must be provided to avoid damage to electric water solenoid valve by vibration.

**IMPORTANT:** Flexible supply line/coupling must be used. Solenoid valve failure due to hard plumbing connections will void warranty.

If the rear area of the dryer, or the water supply is located in an area where it will be exposed to cold/freezing temperatures, provisions must be made to protect these water lines from freezing.

### **WARNING**

**If the water in the supply line or water solenoid valve freezes, the fire suppression system will be inoperative!!**

**IMPORTANT:** Appliance is to be connected to the water mains using a new hose set and the old hose set should not be reused.


## Water Connections

The water connection is made to the 3/4"-11.5 NH hose adapter of the electric water solenoid valve, located at the rear upper midsection of the dryer.

The water solenoid valve has a 3/8" M.P.T. connection supplied with a 3/4"-11.5 NH hose adapter to provide the minimum 1/2" supply (feed) line. Flexible supply line/coupling must be used in an effort to avoid damaging the electric water solenoid valve.

**NOTE:** The 3/4"-11.5 NH is a standard hose coupling screw thread. It is not to be confused with 3/4" N.P.T. The sealing of an NH connection is made with a washer opposed to the mating threads of an N.P.T. assembly. The two thread designs are not compatible.

**IMPORTANT:** Flexible supply line/coupling must be used. Solenoid valve failure due to hard plumbing connections will void warranty. It is recommended that a filter or strainer be installed in the water supply line.

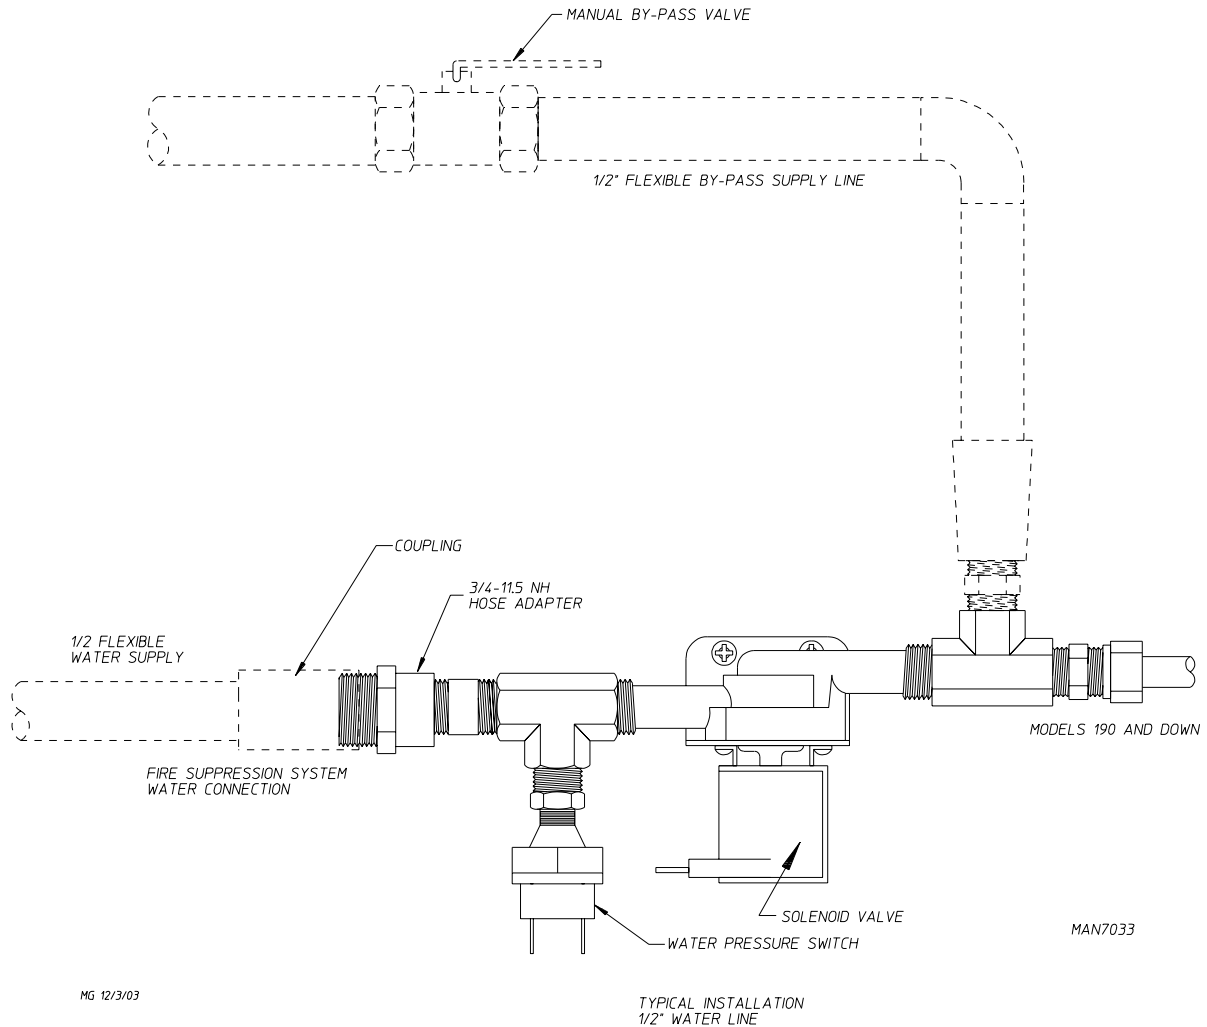

### Optional Manual Bypass

Provisions are made in the dryer fire suppression system for the installation of an optional manual bypass. Depending on the model dryer, the connections for the manual bypass are made at the “T” or “three way” fitting located in the outlet supply side of the water solenoid valve. The use and connections of this manual bypass are at the option or discretion of the owner.

The water connection for the manual bypass is made to the “T” or “three way” fitting, which has a 3/8” F.P.T. and a coupling must be used to provide the minimum 1/2” supply (feed) line.

If the rear area of the dryer, or the water supply is located in an area where it will be exposed to cold/freezing temperatures, provisions must be made to protect these water lines from freezing.

**⚠ WARNING**

**If the water in the supply line or water solenoid valve freezes, the fire suppression system will be inoperative!!**

The manual ball cock shutoff valve must be located outside of the dryer at a distance from the dryer where it is easily accessible.

### Electrical Requirements

No independent external power source or supply connection is necessary. The 24 volt power to operate the fire suppression system is accomplished internally in the dryer (from the dryer controls).

**⚠ WARNING**

**Electrical power must be provided to the dryer at all times. If the main electrical power supply to the dryer is disconnected, the fire suppression system is inoperative!!**

**⚠ WARNING**

**ELECTRICAL SHOCK HAZARD**

**Electrical shock hazard can result in serious injury. If the water dispensing system is activated do not attempt to operate the dryer. If the water dispensing system is activated have the dryer inspected by a qualified agency before operating the dryer.**

## Fire Suppression System Theory of Operation

While the dryer is in an idle state, or 20-seconds after the heat turns off, the Phase 7 control monitors the thermistor probe, located in the top of the tumbler chamber, and records the minimum temperature. If the minimum recorded thermistor probe temperature is greater than 120° F (48° C) and the control detects a 50° rise in temperature, this will be the trip point and the fire suppression system routine will activate.

While a drying cycle is in process and the heat has turned on at least once, the Phase 7 control monitors the exhaust temperature transducer. If the drying cycle temperature set point is set greater than 160° F (71° C) and the control detects an exhaust temperature rise 25° F greater than set point, this will be the trip point and the fire suppression system routine will activate. If set point is below 160° F (71° C), the trip point will be 185° F (85° C).

Once the fire suppression system routine is activated, the control will display and water will be injected into the tumbler chamber. Any time water is being injected into the tumbler, the tumbler drive will turn the load for 1-second every 15-seconds. This process will continue for a minimum of 2 minutes. After the 2 minutes have elapsed, the control will check if the temperature remained above trip point; if so, the water will remain on. The control will continue to check if the temperature is above trip point every 30-seconds. If the water has been on for a constant 10 minutes, the water will be turned off, regardless of the temperature, and the control will display. If the temperature has dropped below trip point, the control will turn off the water prior to 10 minutes.

## System Reset

After the microprocessor determines that the situation is under control and shuts the water being injected into the tumbler off, the microprocessor display will read and the horn/tone will sound until reset manually.

NON-COIN – To reset the microprocessor once the control displays press the red “STOP/CLEAR” key on the keypad.

COIN – To reset the microprocessor once the control displays press and hold the red “PAUSE” key for 3-seconds on the keypad.

## Fire Suppression System Water Valve Check

The operation of the water solenoid valve can be tested to ensure that the water supply system and valve are functional. Before attempting a system check, be sure that all water supply shutoff valves to the dryer are in the OPEN position; the dryer must be in the “READY” mode with no cycle loaded or in progress.

### Non-Coin

Press and hold the red “STOP/CLEAR” key (while in “READY” mode and no cycle is in progress).

Press and hold the “A” key.

Water valve will open and water will be dispensed into tumbler area as long as both keys are held.


The Phase 7 non-coin microprocessor controller (computer) will prompt the user to perform a fire suppression system valve check at every 4000 hours to ensure proper functionality. At the 4000 hour mark, the control will wait for end of the cycle and then will prompt the user to “PLEASE EMPTY TUMBLER, THEN PRESS THE ‘STOP/CLEAR’ AND ‘A’ KEYS TO TEST THE WATER VALVE.” When the “STOP/CLEAR” and “A” keys are pressed, the control will activate the fire suppression system water valve for 2-seconds, at which point the control will prompt the user with the following message: “IF WATER DID NOT TURN ON, CALL FOR SERVICE. THANK YOU.”

**NOTE:** The control will not let the user continue until the valve test has been completed.

### Coin

While the control is in the program mode, press and hold the “PAUSE” key for 3-seconds to get into the valve test mode. Valve test mode: The control will display “PRESS AND HOLD MEDIUM TO OPEN WATER VALVE”. When the medium key is pressed, the control will activate the water output.

## Typical Water Supply

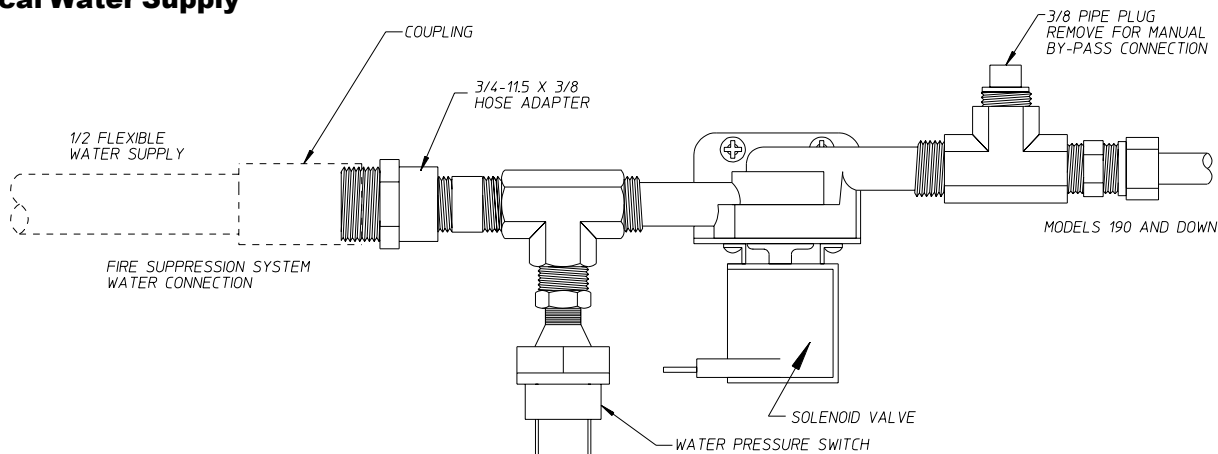

MG 12/3/03

MAN7032

## Fire Suppression System Diagnostics

NON-COIN – In the event that the Phase 7 non-coin microprocessor controller (computer) detects a fault in the fire suppression system, the control will display the message “FIRE SUPPRESSION SYSTEM DISABLED ... READY.” To find out why the fire suppression system is disabling, press and hold the red “STOP/CLEAR” and green “START” keys. This will cause the control to display a diagnostic message, as detailed in the “FIRE SUPPRESSION SYSTEM Diagnostics Messages” section.

COIN – In the event that the Phase 7 non-coin microprocessor controller (computer) detects a fault in the fire suppression system, the control will display the message “FIRE SUPPRESSION SYSTEM DISABLED ... READY, INSERT XX TO START.” To find out the reason for the fire suppression system disabling, press and hold the red “PAUSE” and “LOW” keys. This will cause the control to display a diagnostic message, as detailed in the following section.

### Fire Suppression System Diagnostics Messages

OPEN THERMISTOR PROBE – This message indicates that the fire suppression system thermistor probe either is not connected or is damaged. If this condition is detected, the Phase 7 non-coin control will immediately enter FIRE SUPPRESSION SYSTEM DISABLED mode.

SHORTED THERMISTOR PROBE – This message indicates that the fire suppression system thermistor probe is damaged or the wiring is shorted. If this condition is detected, the Phase 7 non-coin control will immediately enter FIRE SUPPRESSION SYSTEM DISABLED mode.

DISCONNECTED WATER VALVE – This message indicates that the water valve is open or that it is not connected to the control. If this condition is detected, the Phase 7 non-coin control will continue to monitor the condition for a period of 5 minutes before entering FIRE SUPPRESSION SYSTEM DISABLED mode. Once the condition is corrected, the control will continue to monitor the condition for 1 minute before exiting FIRE SUPPRESSION SYSTEM DISABLED mode.

SHORTED WATER VALVE – This message indicates that the water valve is shorted or that the wiring to the valve is shorted. If this condition is detected, the Phase 7 non-coin control will continue to monitor the condition for a period of 5 minutes before entering FIRE SUPPRESSION SYSTEM DISABLED mode. Once the condition is corrected, the control will continue to monitor the condition for 1 minute before exiting FIRE SUPPRESSION SYSTEM DISABLED mode.

WATER NOT CONNECTED – This indicates that there is no water pressure at the water valve. This will occur if water is not connected to the dryer, or if there is low water pressure in the water line coming to the dryer. This could also signify a defective pressure switch or defective wiring to the pressure switch. If this condition is detected, the Phase 7 non-coin control will continue to monitor the condition for a period of 5 minutes before entering FIRE SUPPRESSION SYSTEM DISABLED mode. Once the condition is corrected, the control will continue to monitor the condition for 1 minute before exiting FIRE SUPPRESSION SYSTEM DISABLED mode.

## Starting A Cycle When Computer Is In “Fire Suppression System Is Disabled” Mode

NON-COIN – When the fire suppression system is disabled, the user can still start a cycle. However, when a cycle is started, the control will display the following message: “FIRE SUPPRESSION SYSTEM IS DISABLED. PRESS ‘START’ TO CONTINUE.” This message will be displayed every time a cycle is started, until the disabling condition has been corrected.

COIN – When the fire suppression system is disabled, the user can still start a cycle. Simply insert credit and select a cycle to start.

NOTES \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

## Non-Coin Programming

### PHASE 7.2.2 OPL PROGRAMMING LOCATIONS (MAX TEMP 200°F)

TO ENTER PROGRAMMING MODE PRESS [O] & [A] KEYS TOGETHER.

TO EXIT PROGRAMMING MODE PRESS [O] MULTIPLE TIMES  
UNTIL DISPLAY RETURNS TO "READY".

- 0: SELECT LANGUAGE
- 1: SELECT SYSTEM PARAMETERS
  - 0: DRYER SETUP
    - 0: SELECT MODEL
    - 1: SYSTEM TEMP
    - 2: ENTER LINT CLEANING FREQUENCY 1 TO 10 HOURS
    - 3: ENTER AUDIO ALERT ON TIMES 0 TO 10
    - 4: ROTATION SENSOR
    - 5: BOARD ADDRESS 00 TO ZZ
    - 6: AUTO CYCLE TIME OUT 0 TO 99 MINUTES
  - 1: REVERSING SETUP
    - 0: ENTER SPIN TIME 30 TO 120 SECONDS
    - 1: ENTER STOP TIME 5 TO 10 SECONDS
  - 2: WRINKLE GUARD SETUP
    - 0: WRINKLE GUARD AUDIO ALERT
  - 3: STEAM INJECTION SETUP
- 2: PROGRAM A - F CYCLES
  - SELECT A - F KEY
  - SELECT CYCLE TYPE
  - AUTO
    - 0: REVERSE MODE
    - 1: ENTER DRY TEMP 160°F (71°C) TO 200°F (94°C)
    - 2: ENTER DRYNESS LEVEL
    - 3: ENTER CYCLE ADJUSTMENT VALUE 0 TO 99
    - 4: CONTROLLED COOL DOWN
    - 5: ENTER COOL DOWN TIME 0 TO 99 MINUTES
    - 6: ENTER COOL DOWN TEMP 70°F (21°C) TO 100°F (38°C)
  - MANUAL
    - 0: REVERSE MODE
    - 1: ENTER DRY TIME 0 TO 99 MINUTES
    - 2: ENTER DRY TEMP 100°F (38°C) TO 200°F (94°C)
    - 3: CONTROLLED COOL DOWN
    - 4: ENTER COOL DOWN TIME 0 TO 99 MINUTES
    - 5: ENTER COOL DOWN TEMP 70°F (21°C) TO 100°F (38°C)
    - 6: STEAM INJECTION
- 3: PROGRAM 0 - 40 CYCLES
  - ENTER 0 - 40
  - SELECT CYCLE TYPE
  - AUTO
    - 0: REVERSE MODE
    - 1: ENTER DRY TEMP 160°F (71°C) TO 200°F (94°C)
    - 2: ENTER DRYNESS LEVEL
    - 3: ENTER CYCLE ADJUSTMENT VALUE 0 TO 99
    - 4: CONTROLLED COOL DOWN
    - 5: ENTER COOL DOWN TIME 0 TO 99 MINUTES
    - 6: ENTER COOL DOWN TEMP 70°F (21°C) TO 100°F (38°C)
  - MANUAL
    - 0: REVERSE MODE
    - 1: ENTER DRY TIME 0 TO 99 MINUTES
    - 2: ENTER DRY TEMP 100°F (38°C) TO 200°F (94°C)
    - 3: CONTROLLED COOL DOWN
    - 4: ENTER COOL DOWN TIME 0 TO 99 MINUTES
    - 5: ENTER COOL DOWN TEMP 70°F (21°C) TO 100°F (38°C)
    - 6: STEAM INJECTION
- 4: DEFAULT SETTINGS
  - ENTER PASSWORD
  - (PRESS "1" "2" "3")
  - CONFIRM DEFAULTS

P/N:114043

### Phase 7.2 Non-Coin Diagnostic Codes

- MAIN DOOR OPENED – A main door or door circuit is open.
- EXHAUST HIGH TEMP FAULT – Tumbler is above 220° F (104° C).
- LINT ACCESS OPEN – Lint drawer or lint door circuit is open.
- EXHAUST HIGH LIMIT FAULT – Temp. disk under tumbler is open.
- SAIL SWITCH CLOSED FAULT – Sail switch is closed – should be open at the start of a cycle.

SAIL SWITCH OPEN FAULT – Sail switch remained open after the cycle started. Should have closed.

BURNER HIGH LIMIT FAULT – Burner temp. disk has opened.

BURNER IGNITION CONTROL – No signal to gas valve from (DSI) module during trial for ignition time. DSI module is bad.

IGNITION FAULT – Gas valve did not remain open after trial for ignition. Indicates that no flame was detected.

FLAME FAULT – Flame was detected during trial for ignition but failed later.

ROTATION FAULT – Indicates the tumbler is not rotating.

OPEN EXHAUST TEMPERATURE PROBE – Indicates the exhaust temperature probe is open or shorted.

OPEN FIRE SUPPRESSION SYSTEM (F.S.S.) PROBE FAULT – Indicates the temperature probe for the F.S.S. is open or shorted.

LOW VOLTAGE FAULT – Volt dropped below the operating value.

EE PROM FAULT ### – Error in memory location. Fault correction:

Enter the program mode by pressing the UP and STOP keys.

Press "4" and ENTER keys in password "FAA" Press UP ARROW.

Press enter to confirm reset of EE PROM.

### Inputs (Red L.E.D.s)

#### All indications are with L.E.D. lit

ESTOP – Indicates E-STOP has been pressed.

GAS\_V – Indicates the gas valve is open (ON).

BRHL – Indicates the burner high limit disk is closed (temperature below 330° F [166° C]).

SAIL – Indicates the sail switch is closed.

EXHL – Indicates the exhaust high limit disk is closed (temperature below 225° F [107° C]).

MAIN – Indicates the status of main door is closed.

LINT – Indicates the lint drawer is closed.

FUSE – Indicates the status of the control voltage after POWER ON button has been pressed.

### Outputs (Green L.E.D.s)

#### All indications are with L.E.D. lit

AUX – This is for a spare output to be programmed.

STEAM – Indicates the status of the steam injection output.

\_HEAT – Indicates the status of the heat output.

AIR – Indicates the status of the air jet output.

REV – Indicates the status of the tumbler reverse direction output.

If the request to tumble the drum in the reverse direction is made, then the L.E.D. is ON.

FWD – This L.E.D. will indicate the status of the tumbler forward direction output.

FAN – This L.E.D. will indicate the status of the fan output.



## Coin Programming

Enter Programming Mode By Placing  
The Programming Switch On The Phase 7 Board Up  
While No Cycle Is In Progress.  
"Program Mode" Will Then Be Displayed.

Navigating Within The Programming Mode:  
"Med" Key To Enter A Program Location.  
"Hi-temp" / "Lo-temp" Keys Increase / Decrease  
Program Location.  
"Pause" Key Rejects Entry And Moves To Next  
Program Location.

Changing A Parameter Value:  
With Parameter Value Displayed Pressing "Lo Temp"  
Or "High Temp" Changes The Parameter Value.  
"Med" Key Must Be Pressed To Accept A New Parameter.

PHASE 7.3.2 COIN PROGRAM LOCATION SUMMARY	
(MAX TEMP 190°F)	
TO ENTER OR EXIT PROGRAMMING MODE TOGGLE PROGRAM SWITCH UP OR DOWN RESPECTIVELY	
KEYPAD LEGEND	
HI KEY- INCREMENT OR TOGGLE	
MED KEY- ENTER	
LO KEY- DECREMENT OR TOGGLE	
PAUSE KEY- EXIT LOCATION WITHOUT SAVING	
PL #01 CONTROL SETTINGS	
LANGUAGE	
TEMP SCALE	
BUZZER MODE	
BEEP COUNT 1 TO 9 BEEPS	
DRY MODE	
PAUSE TIME 0 TO 3 MINUTES	
READY PROMPT	
PL #02 MACHINE SETTINGS	
MODEL	
ROTATION SENSOR	
LINT CLEANING FREQUENCY 0 TO 10 HOURS	
AXIAL THERMISTOR INPUT	
THERMISTOR TEMP SET POINT 100 TO 400°F	
PL #03 HI KEY SETTINGS	
TIME FOR AMOUNT TO START 1 TO 99 MINUTES	
TIME FOR TOP OFF 1 TO 99 MINUTES	
DRY TEMP 100 TO 190°F	
COOL TIME 0 TO 9 MINUTES	
PL #04 MED KEY SETTINGS	
TIME FOR AMOUNT TO START 1 TO 99 MINUTES	
TIME FOR TOP OFF 1 TO 99 MINUTES	
DRY TEMP 100 TO 190°F	
COOL TIME 0 TO 9 MINUTES	
PL #05 LO KEY SETTINGS	
TIME FOR AMOUNT TO START 1 TO 99 MINUTES	
TIME FOR TOP OFF 1 TO 99 MINUTES	
DRY TEMP 100 TO 190°F	
COOL TIME 0 TO 9 MINUTES	
PL #06 VENDING PARAMETERS	
CURRENCY SYMBOL	
VENDING MODE	
VENDING SAFEGUARD	
LEFT COIN DENOMINATION 0.05 TO 25.00	
RIGHT COIN DENOMINATION 0.05 TO 25.00	
AMOUNT TO START 0.05 TO 25.00	
AMOUNT FOR TOP OFF 0.05 TO 25.00	
PL #07 FAULT RECORDING	
NO FAULTS/FAULTS	

P/N: 112704

### Typical Programming Example:

Change a single coin acceptor from factory setting to yield  
20 minutes for \$.50, \$.50 as the minimum amount to start,  
and no differential in regard to temperature key selection.

Settings: Time for Amt to Start (PL03, PL04, PL05) 20  
Left Coin Denomination (PL06) ..... \$.25  
Amount to Start (PL06) ..... \$.50

### Clearing Coin Credit:

NO CYCLE IN PROGRESS AND PROGRAM SWITCH DOWN.

Hold PAUSE while pressing HI 3 times, LO twice, and MED  
once.

"Clear Credit?" will appear. Press any key to complete.

## Accessing and Clearing Coin Vault Total

Enter program mode by switching program switch (up) while  
no cycle is in progress.

Press HI – "Coin Vault total is \$XXX" will appear.

Press HI – "Clear Coin Vault Total?" will appear.

Press MED to clear this amount or PAUSE to leave as is.

### Hot Keys:

In the Coin Mode Hot Keys are enabled while in a cycle by  
placing the program switch in the program (up) position.

In Free Mode Hot Keys are always enabled.

HI – Remaining credit – coin mode / remaining time – free  
mode.

MED – Temps – Exhaust / left, S.A.F.E. / right, Axial / middle  
(Axial dryer)

LO – Tumbler RPM

S.A.F.E. TEST: Switch to program mode. Press and hold the  
"Pause" key until prompted to press MED to open the water.

### L.C.D. Operating Messages

When Display Reads "Out of Order"

Pressing LO displays one of the causes listed below.

MODEL FAULT – Wrong model selected at PL01/3rd position.

SAIL SWITCH CLOSED – Sail switch closed before starting.

SAIL SWITCH OPEN – Sail switch failed to close after starting.

BURNER HI-LIMIT – Oven thermostat switch has opened.

EXHAUST HI-LIMIT – Tumbler thermostat switch has opened.

BURNER CONTROL – No gas valve signal – Bad DSI unit.

IGNITION FAULT – No flame ignition detected thru all retries.

FLAME FAULT – Flame detected at ignition but failed later.

CLEAN LINT – Due to failure to clean out lint.

CHECK CONTROL BOARD FUSE #2 – 2 on Phase 7 board  
is open.

EXHAUST PROBE FAULT / AXIAL – Indicated probe has failed.

ROTATION SENSOR – Rotation sensor or tumbler drive has  
failed.

EXHAUST HI-TEMP – Overheating condition has occurred.

BURNER PURGE FAULT – Gas return signal before heat  
output.

### "S.A.F.E. System Disabled"

In Coin Mode hold "Pause" and "LO" keys down together.

OPEN / SHORTED THERMISTOR – Probe or probe circuit  
bad.

OPEN / SHORTED WATER VALVE – Water valve or circuit  
bad.

WATER NOT CONNECTED – No water pressure at sol. valve.

### "S.A.F.E. System (was) Activated"

Indicates the S.A.F.E. system is active or was active because  
a fire was detected. The buzzer sounds at a fast pace while  
the system is active.

A service call to your local dealer is required to reset the  
microprocessor controller (computer). Qualified personnel  
will inspect the dryer and, if it is found to be safe for operation,  
reset the control.

